Memo-Matic*

BOOK 37

KNITTING FASHIONS

BY SINGER

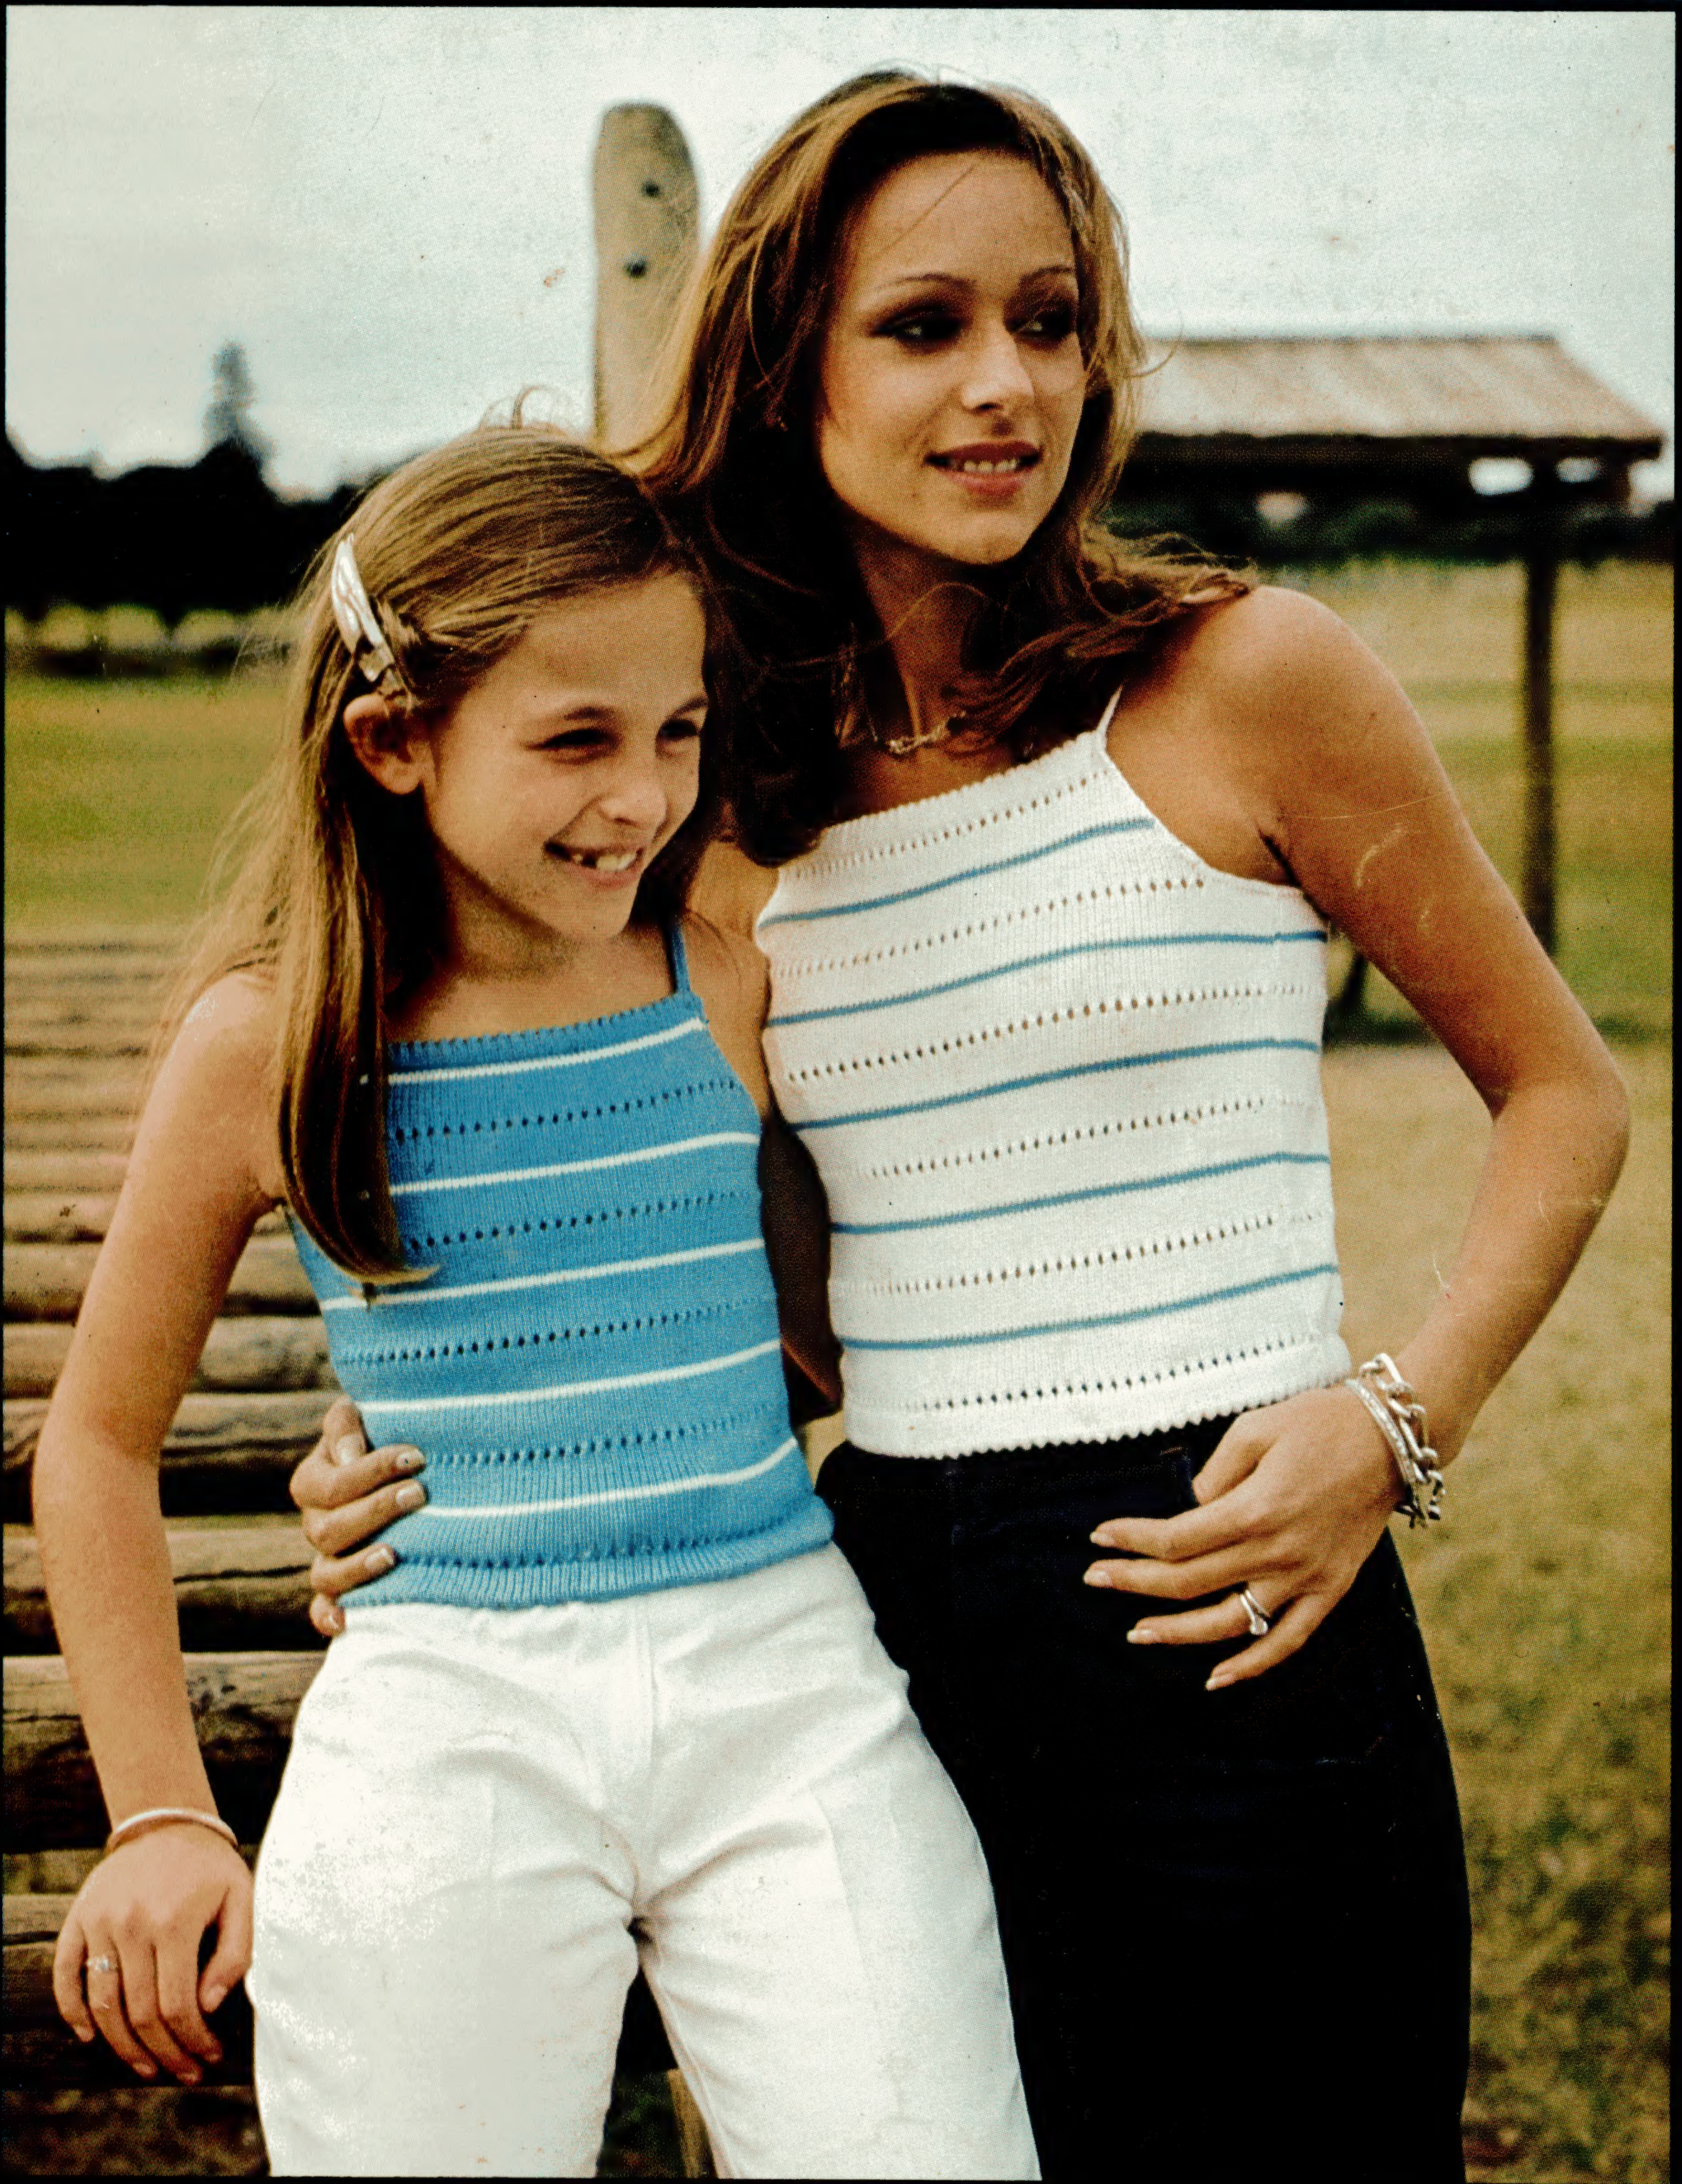

Memo-Matic*
KNITTING FASHIONS
BY SINGER

Published with All Rights Reserved by
SINGER AUSTRALIA LIMITED

tension

This varies slightly with each Singer Machine, so it is necessary to check your tension before commencing.

How to check your tension.

It is advisable to make a swatch of sample piece in the yarn to be used and measure 24 hours later. Set up single bed machine with 70 stitches, and with the T.D. at the setting recommended for the yarn, work 70 rows. Remove work from machine and, using a rule or inch tape, measure the stitches to 4 inches (10 cm) and the rows to 4 inches (10 cm). If the tension is too loose, move the T.D. setting forward one dot. (Remember when working ribbing to alter both T.D.'s either back or forward to correspond with stockinet.)

CAUTION

These garments have been designed exclusively for the yarns specified. We strongly recommend the use of this yarn to obtain the correct results.

abbreviations

Beg.	**Beginning**
Dec.	**Decrease**
Incr.	**Increase**
K.	**Knit**
Rem.	**Remaining**
R.C.	**Row Counter**
St.	**Stitch**
St.St.	**Stocking Stitch**
T.	**Tension**
M.C.	**Main Colour**
C.C.	**Contrast Colour**
F.1	**Feeder 1**
F.2	**Feeder 2**

LADY/GIRL STRIPED TOP

1

INSTRUCTION SUITABLE FOR ALL MODELS

SEE FRONT COVER.

MEASUREMENTS.

SIZE		A	B	C	D	E	F
Underarm/Bust	cm	70	75	80	85	90	95
	ins.	27½	29½	31½	33½	35½	37½
MEASURES	cm	60	65	70	75	80	85
	ins.	23½	25½	27½	29½	31½	33½
Length (not including straps)	cm	27	27	31	31	36	36
	ins.	10¼	10½	12¼	12¼	14	14

MATERIALS.

PATONS GEM KNITTING COTTON

	A	B	C	D	E	F
Main Colour 50g balls	2	2	3	3	3	4

Contrast

50g balls . Small quantity.
3.00 (No. 10 - 11) Disc Crochet Hook.

TENSION—29½ sts. and 42 rows to 10 cm (approx. 4 ins.) over st.st. Suggested T.6.1. Check the tension on your machine to ensure accuracy.

BACK AND FRONT (both alike)—Carriage on right, using waste knitting, cast on 88 (96, 103, 111, 118, 126) sts. K.6 rows. K.1 row with ravel cord. T.5.1, using M.C., K.10 rows. Transfer every 2nd st. on to adjacent needles, leave empty needles in working position and K.1 row. T.6.1, K.9 rows. Take up hem. T.7, K.1 row. R.C.O. ** T.6.1. Transfer every 2nd st. on to adjacent needles, leave empty needles in working position and K.1 row.

K.10 rows. Using C.C., K.2 rows. Using M.C. K.10 rows. ** Keeping continuity of pattern as from ** to ** work 59 (59, 69, 69, 81, 81) rows. 82 (82, 92, 92, 104, 104) rows.

Armhole Shaping—R.C.O. Keeping patt. correct, cast off 8 (9, 10, 11, 12, 13) sts. at beg. of next 2 rows. Dec. 1 st. at each end of next row and every 2nd row 7 (9, 9, 11, 13, 14) times. 56 (58, 63, 65, 66, 70) sts. K.12 (8, 11, 7, 15, 13) rows. Transfer every 2nd st. on to adjacent needles, leave empty needles in working position and K.1 row. T.5.1, K.6 rows. Cast off. 36 (36, 39, 39, 51, 51) rows.

CORD (Make 2)—Carriage on right, bring 3 needles into D position, then handwind M.C. from left to right as in instruction book (P.70 for models 322/23.) Continue knitting until cord measures 17 (18, 19, 19, 20, 20) cm . . . 6¾ (7, 7½, 7½, 7¾, 7¾) ins. from beg. Cast off.

MAKE UP—With a slightly damp cloth and warm iron, press lightly. Using back-stitch, sew up side seams. Fold top hem to wrong side on picot line and slip stitch in position. Sew tubular cord to each corner of front. Take cord over shoulder. Adjust length of strap and sew to corners at back. Using crochet hook and M.C., work 1 row double crochet evenly around armholes. Elastic may be inserted in hems at top and bottom of garment if desired. Press seams.

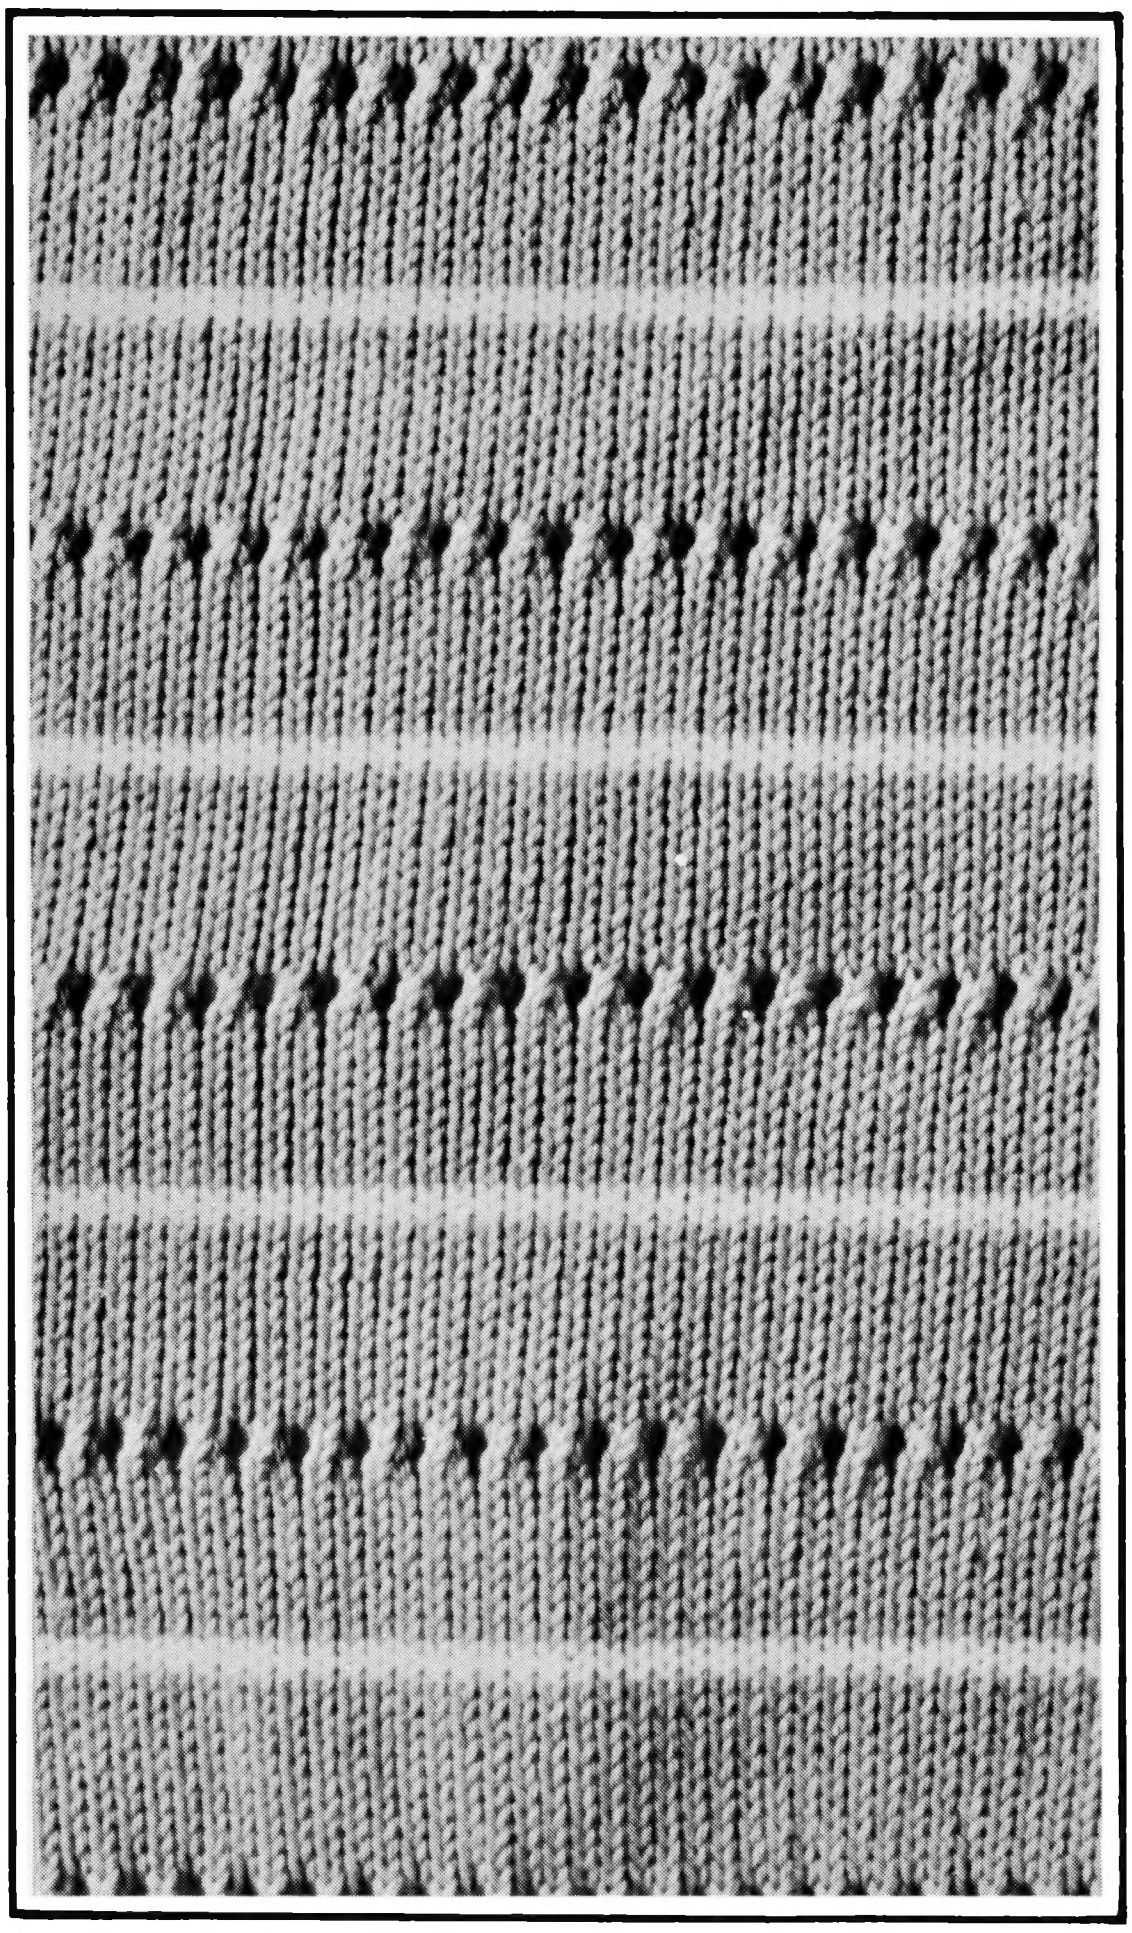

LADY-GIRL STRIPED TOP

PATTERN No. 2

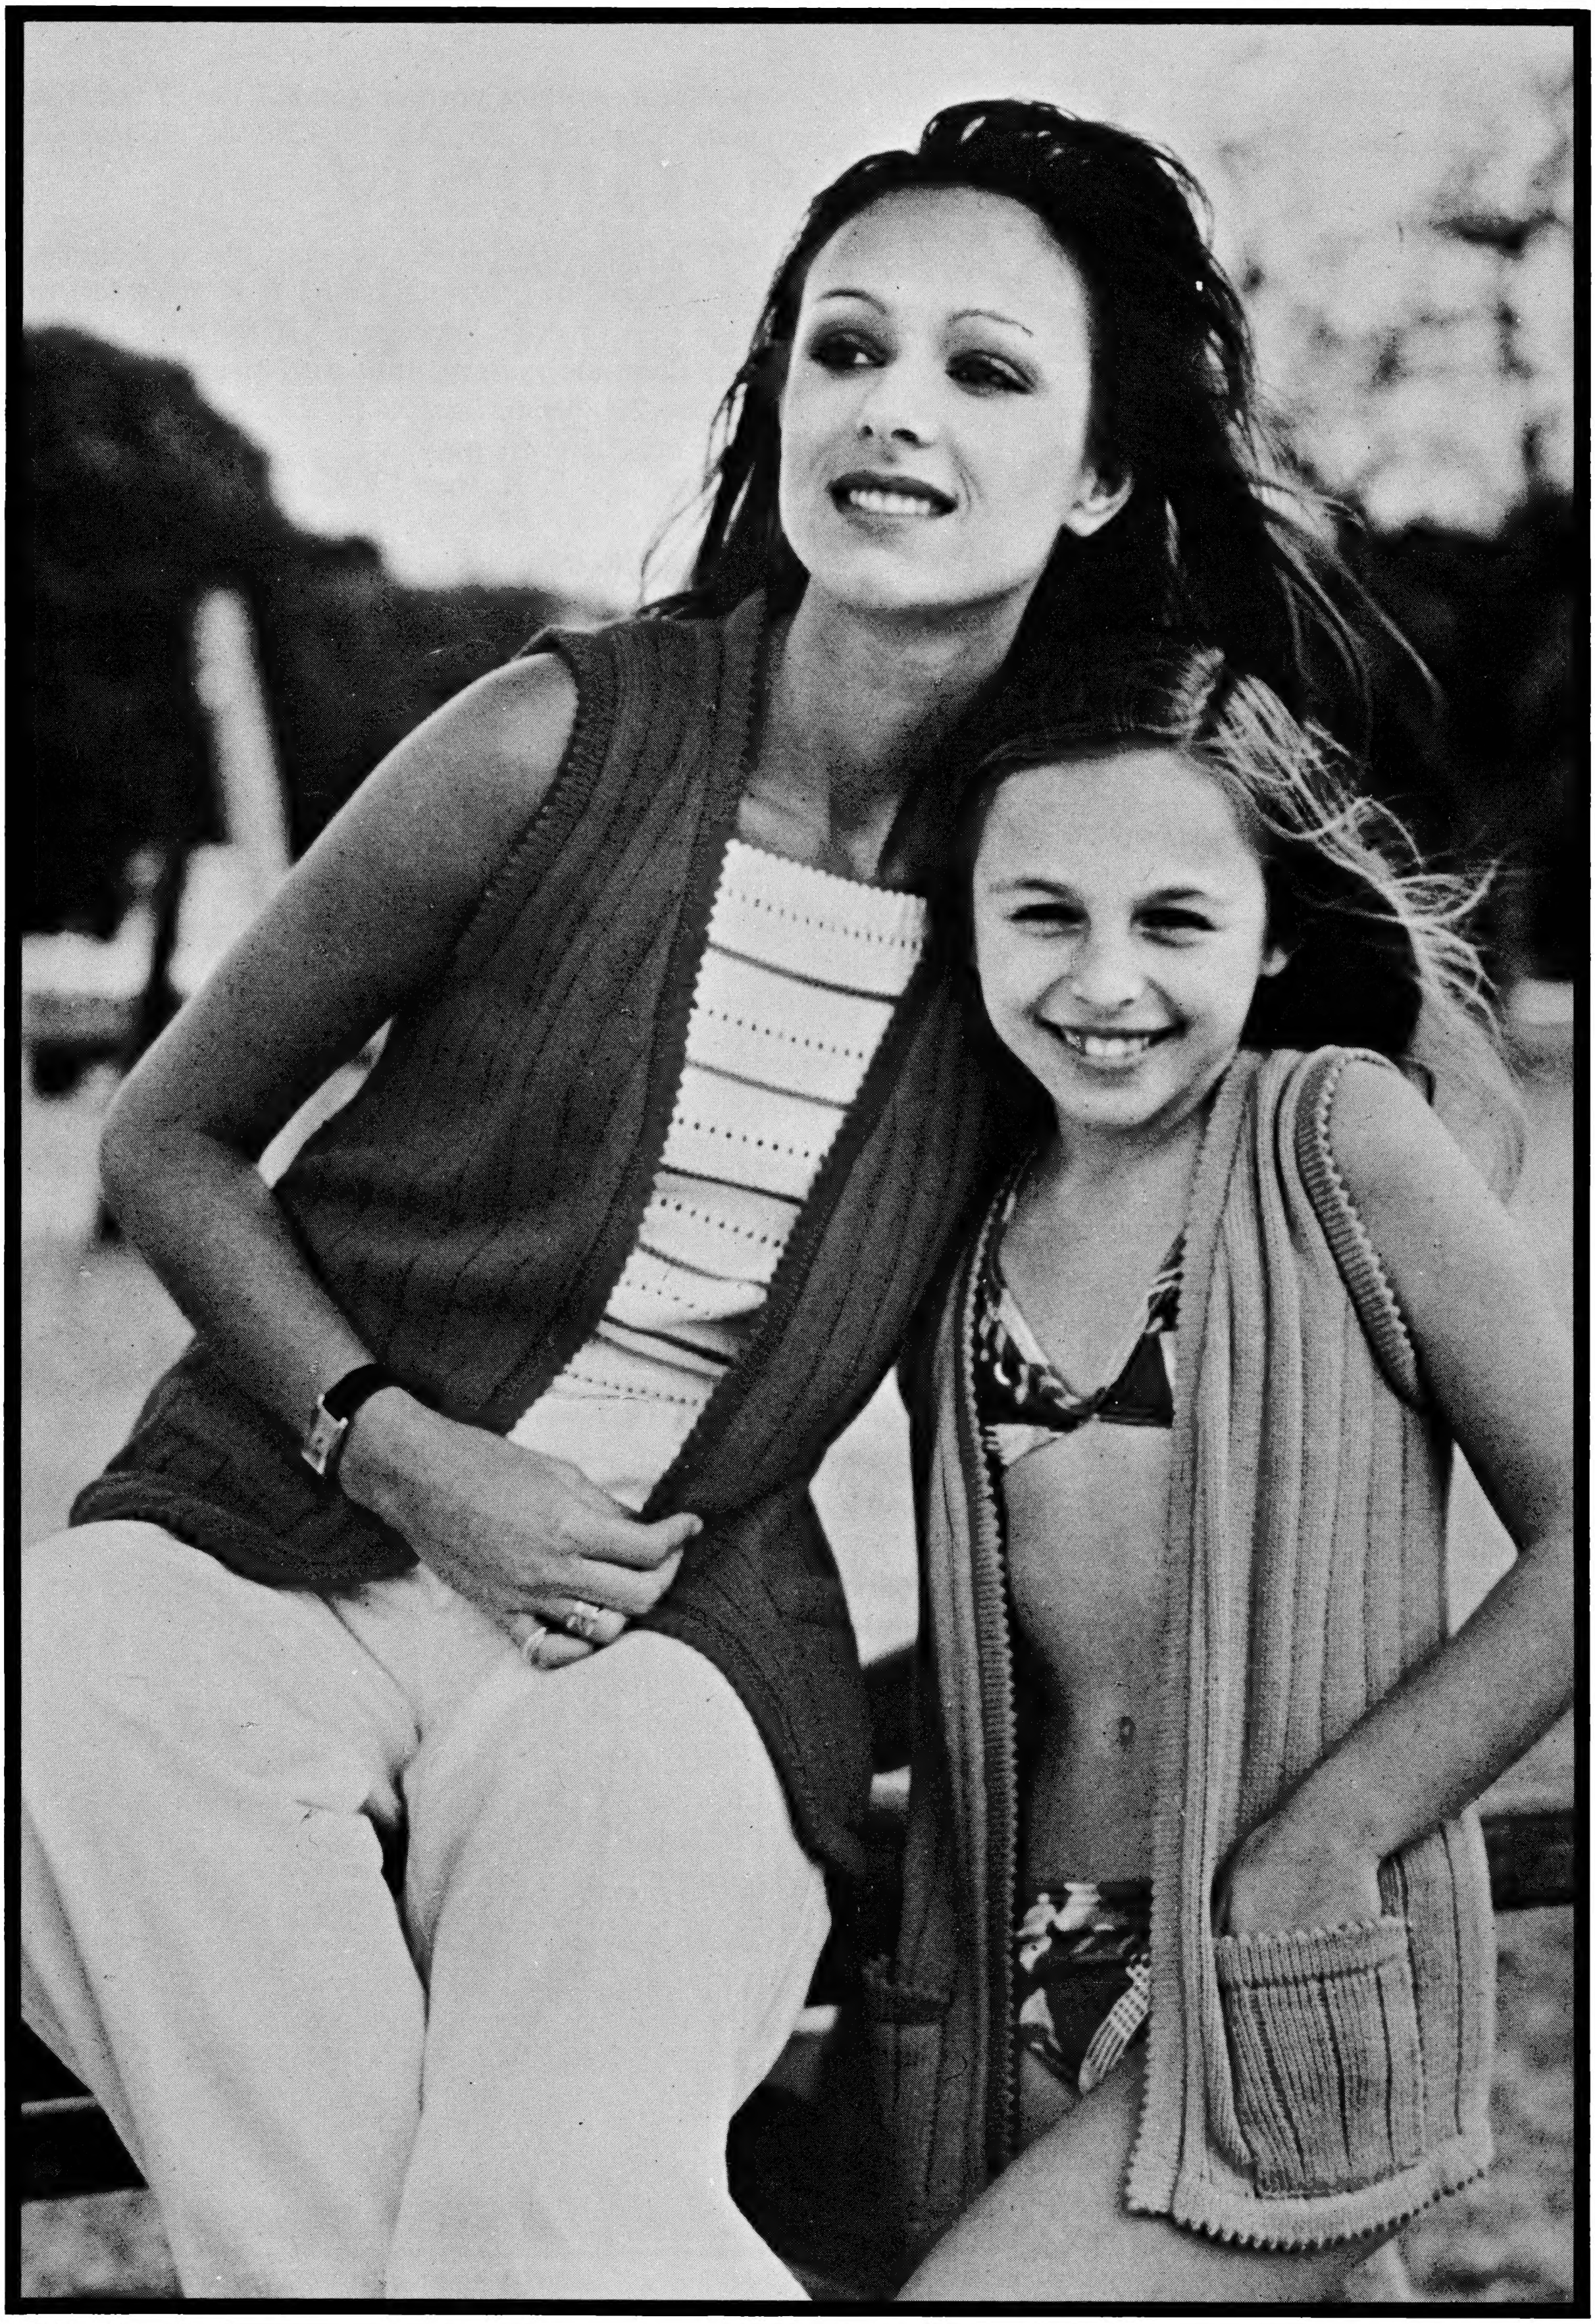

Lady/Girl Jacket

2

INSTRUCTION SUITABLE FOR ALL MODELS.

MEASUREMENTS.

SIZE		**A**	**B**	**C**	**D**	**E**	**F**
Under Underarm/Bust	cm	70	75	80	85	90	95
	ins.	27½	29½	31½	33½	35½	37½
Measures	cm	74	79	84	89	94	99
	ins.	29	31	33	35	37	39
Length	cm	50	55	60	62	63	63
	ins.	19¾	21¾	23½	24½	24¾	24¾

MATERIALS.

PATONS GEM KNITTING COTTON

50g balls	4	5	5	6	6	7

TENSION—29½ sts. and 42 rows to 10 cm (approx. 4 ins.) over st.st. suggested T.6.1. Check the tension on your machine to ensure accuracy.

BACK—Carriage on right, using waste knitting, cast on 111 (118, 125, 132, 139, 146) sts. * K.6 rows. K.1 row with ravel cord. R.C.O. T.5.1, using gem K.9 rows. Transfer every 2nd st. on to adjacent needles, leave empty needles in working position and K.1 row. T.6.1, K.8 rows. Take up hem. T.7.1, K.1 row. ** Place needles for pattern as follows:—

Counting from side closest to carriage place 7th st. on to 8th needle, 14th st. on to 15th needle, 21st st. on to 22nd needle and so on, pushing empty needles into "A" position.

NOTE—Needles in "A" position are counted as sts. *** T.6.1, K.130 (142, 158, 158, 158, 158) rows. 149 (161, 177, 177, 177, 177) rows. ****

Armhole Shaping—R.C.O. Cast off 8 (8, 9, 9, 9, 10) sts. at beg. of next 2 rows. Dec. 1 st. at each end of every row 5 (7, 7, 3, 5, 5) times, then in every 2nd row 6 (5, 5, 7, 7, 8) times. 73 (78, 83, 94, 97, 100) sts. K.53 (61, 65, 73, 75, 73) rows.

Shape Shoulders—Cast off 14 (15, 16, 20, 20, 21) sts. at beg. of next 2 rows. Cast off remaing 45 (48, 51, 54, 57, 58) sts. 74 (82, 86, 94, 98, 98) rows.

RIGHT FRONT—Carriage on right, using waste knitting cast on 54 (58, 61, 65, 69, 73) sts. Work as from * to **** for Back.

Armhole Shaping—R.C.O. Cast off 8 (8, 9, 9, 9, 10) sts. at beg. of next row, at same time dec. 1 st. at end. K.1 row. Dec. 1 st. at armhole edge in every row 5 (7, 7, 3, 5, 5) times, then in every 2nd row 6 (5, 5, 7, 7, 8) times, at same time dec. 1 st. at front edge in next row and every 2nd row 4 (4, 4, 6, 8) times, then in every following 4th row 15 (17, 18, 20, 20, 19) times. 14 (15, 16, 20, 20, 21) sts. K.1 row. Cast off. 72 (80, 84, 92, 96, 96) rows.

LEFT FRONT—Work as for Right Front, reversing shapings and needle arrangement.

POCKETS (Make 2).—Carriage on right, using waste knitting, cast on 27 sts. Work as from * to *** for Back. T.6.1, K.40 rows. Cast off

FRONT BAND (Make 2).—Carriage on right, using waste knitting cast on 169 (183, 191, 195, 197, 199) sts. Work as from * to ** for Back. T.6.1, K.1 row. Cast off loosely.

ARMBANDS (Make 2).—Carriage on right, using waste knitting, cast on 112 (124, 132, 144, 150, 152) sts. Work as from * to ** for Back. T.6.1, K.1 row. Cast off loosely.

MAKE UP—With a slightly damp cloth and warm iron, press lightly. Using back-stitch, sew up side and shoulder seams. Sew front band seam tog. for centre back seam. Join armbands. Sew cast off edge of front bands and armbands in position making seams at centre back and underarm. Slip-stitch pockets in position. Press seams.

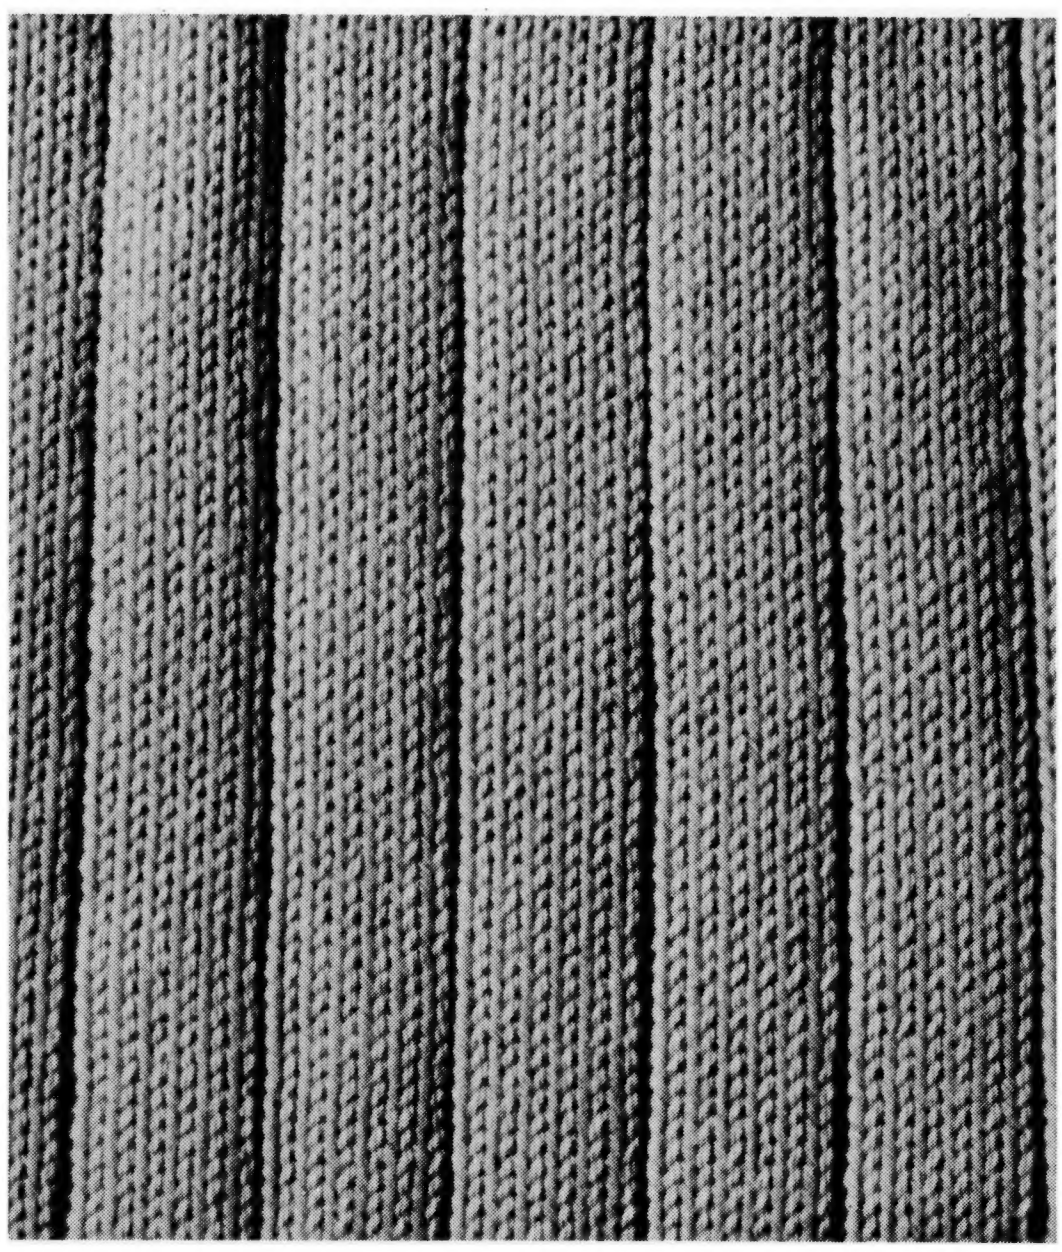

LADY-GIRL JACKET

LADIES HALTER TOP

MEASUREMENTS.

SIZE		A	B	C	D
Bust	cm	80	85	90	95
	ins.	31½	33½	35½	37½
Measures	cm	75	80	85	90
	ins.	29½	31½	33½	35½
Length (not including strap)					
	cm	32	33	33	34
	ins.	12½	13	13	13½

MATERIALS.

PATONS GEM KNITTING COTTON				
50g balls	2	2	2	2

3.00 (No. 10 - 11) "Disc" Crochet Hook.

PATTERN.

Series No. 72 - Card No. 335 - Drive Lace Patterns.

TENSION—28 sts. and 46 rows to 10 cm (approx. 4 ins.) over patt. Suggested T.6.1 on main machine and 5.1 on ribber.

Check the tension on your machine to ensure accuracy.

BACK—Select 94 (102, 110, 118) needles on main bed and arrange needles on both beds for K.2, P.2 rib (2nd way in Ribber Book) 96 (104, 112, 120) needles in "B" position. Cast on for K.2, P.2 rib. Transfer 2 left edge sts. on ribber to the left end needles of main machine.

94 (102, 110, 118) needles in "B" position. R.C.O. T.3, K.88 rows, incr. 1 st. each end of last row. 96 (104, 112, 120) sts. Transfer to main bed. K.6 rows waste knitting and remove from machine. Reverse knitting and replace on ribber bed. Refer to Step 7 (Drive Lace Knitting — Ribber Instruction Book — P.37). Using card and recommended T., K.1 row. ** Commence pattern and K.33 rows. 122 rows. Cast off.

FRONT—Select 108 (114, 120, 126) needles on main bed and arrange needles on both beds for K.2, P.2 rib (2nd way in Ribber Book) 110 (116, 122, 128) needles in "B" position. Cast on for K.2, P.2 rib. Transfer 2 left edge sts. on ribber to the left end needles of main machine. 108 (114, 120, 126) needles in "B" position. R.C.O. T.3, K.88 rows, — incr. 1 st. at each end of last row. 110 (116, 122, 128) sts. Transfer to main bed. K.6 rows waste knitting and remove from machine. Reverse knitting and replace on ribber bed. Refer to Step 7 (Drive Lace Knitting — Ribber Instruction Book — P.37). Using card and recommended T., K.1 row. Commence pattern and K.24 rows. 113 rows.

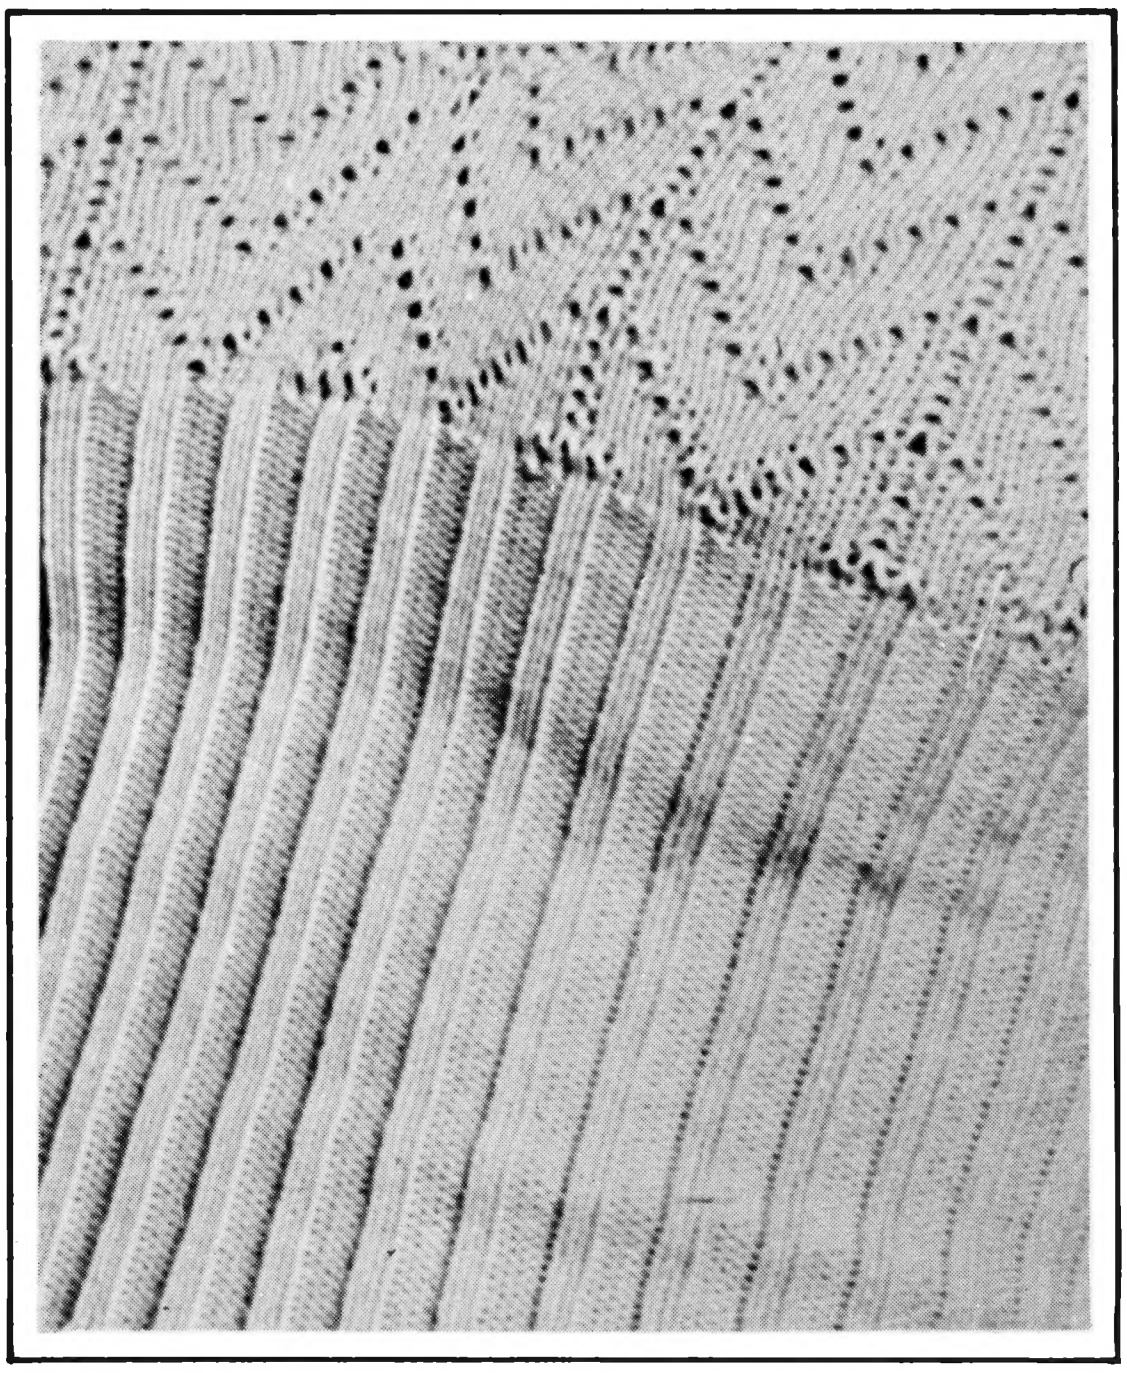

LADIES' HALTER TOP

Shape Neck—Note card row No. in window. R.C.O. K.55 (58, 61, 64) needles opposite carriage on to 6 rows waste knitting, push same needles in "A" position. (Waste knitting prevents brushing up of yarn). Dec. 1 st. at neck edge in 3rd row then every 2nd row 3 times 51 (54, 57, 60) sts. Dec. 1 st. at each end of every 2nd row 5 (6, 7, 8) times. 41 (42, 43, 44) sts. All Sizes—Dec. 1 st. at each end of every row 20 (20, 21, 21) times. 1 (2, 1, 2) st/s. B & D only — K.2 tog. 39 (41, 44, 46) rows. All Sizes — Fasten off. Pull undone waste knitting and return needles to "B" position. Rememorize carriage to card row No. previously noted. R.C.O. Knit to correspond with other side.

HALTER STRAP—Make a length of chain long enough to reach from point of bra top around back of neck to point of other top. Work 2 rows double crochet evenly along both sides of foundation chain.

MAKE UP—With a slightly damp cloth and warm iron, press lightly. Using back-stitch, sew up side seams. Work 1 row double crochet evenly around top edge only of top. Work another row of double crochet over elastic keeping work firm. Sew halter neck strap in position. Press seams.

PATTERN No. 3

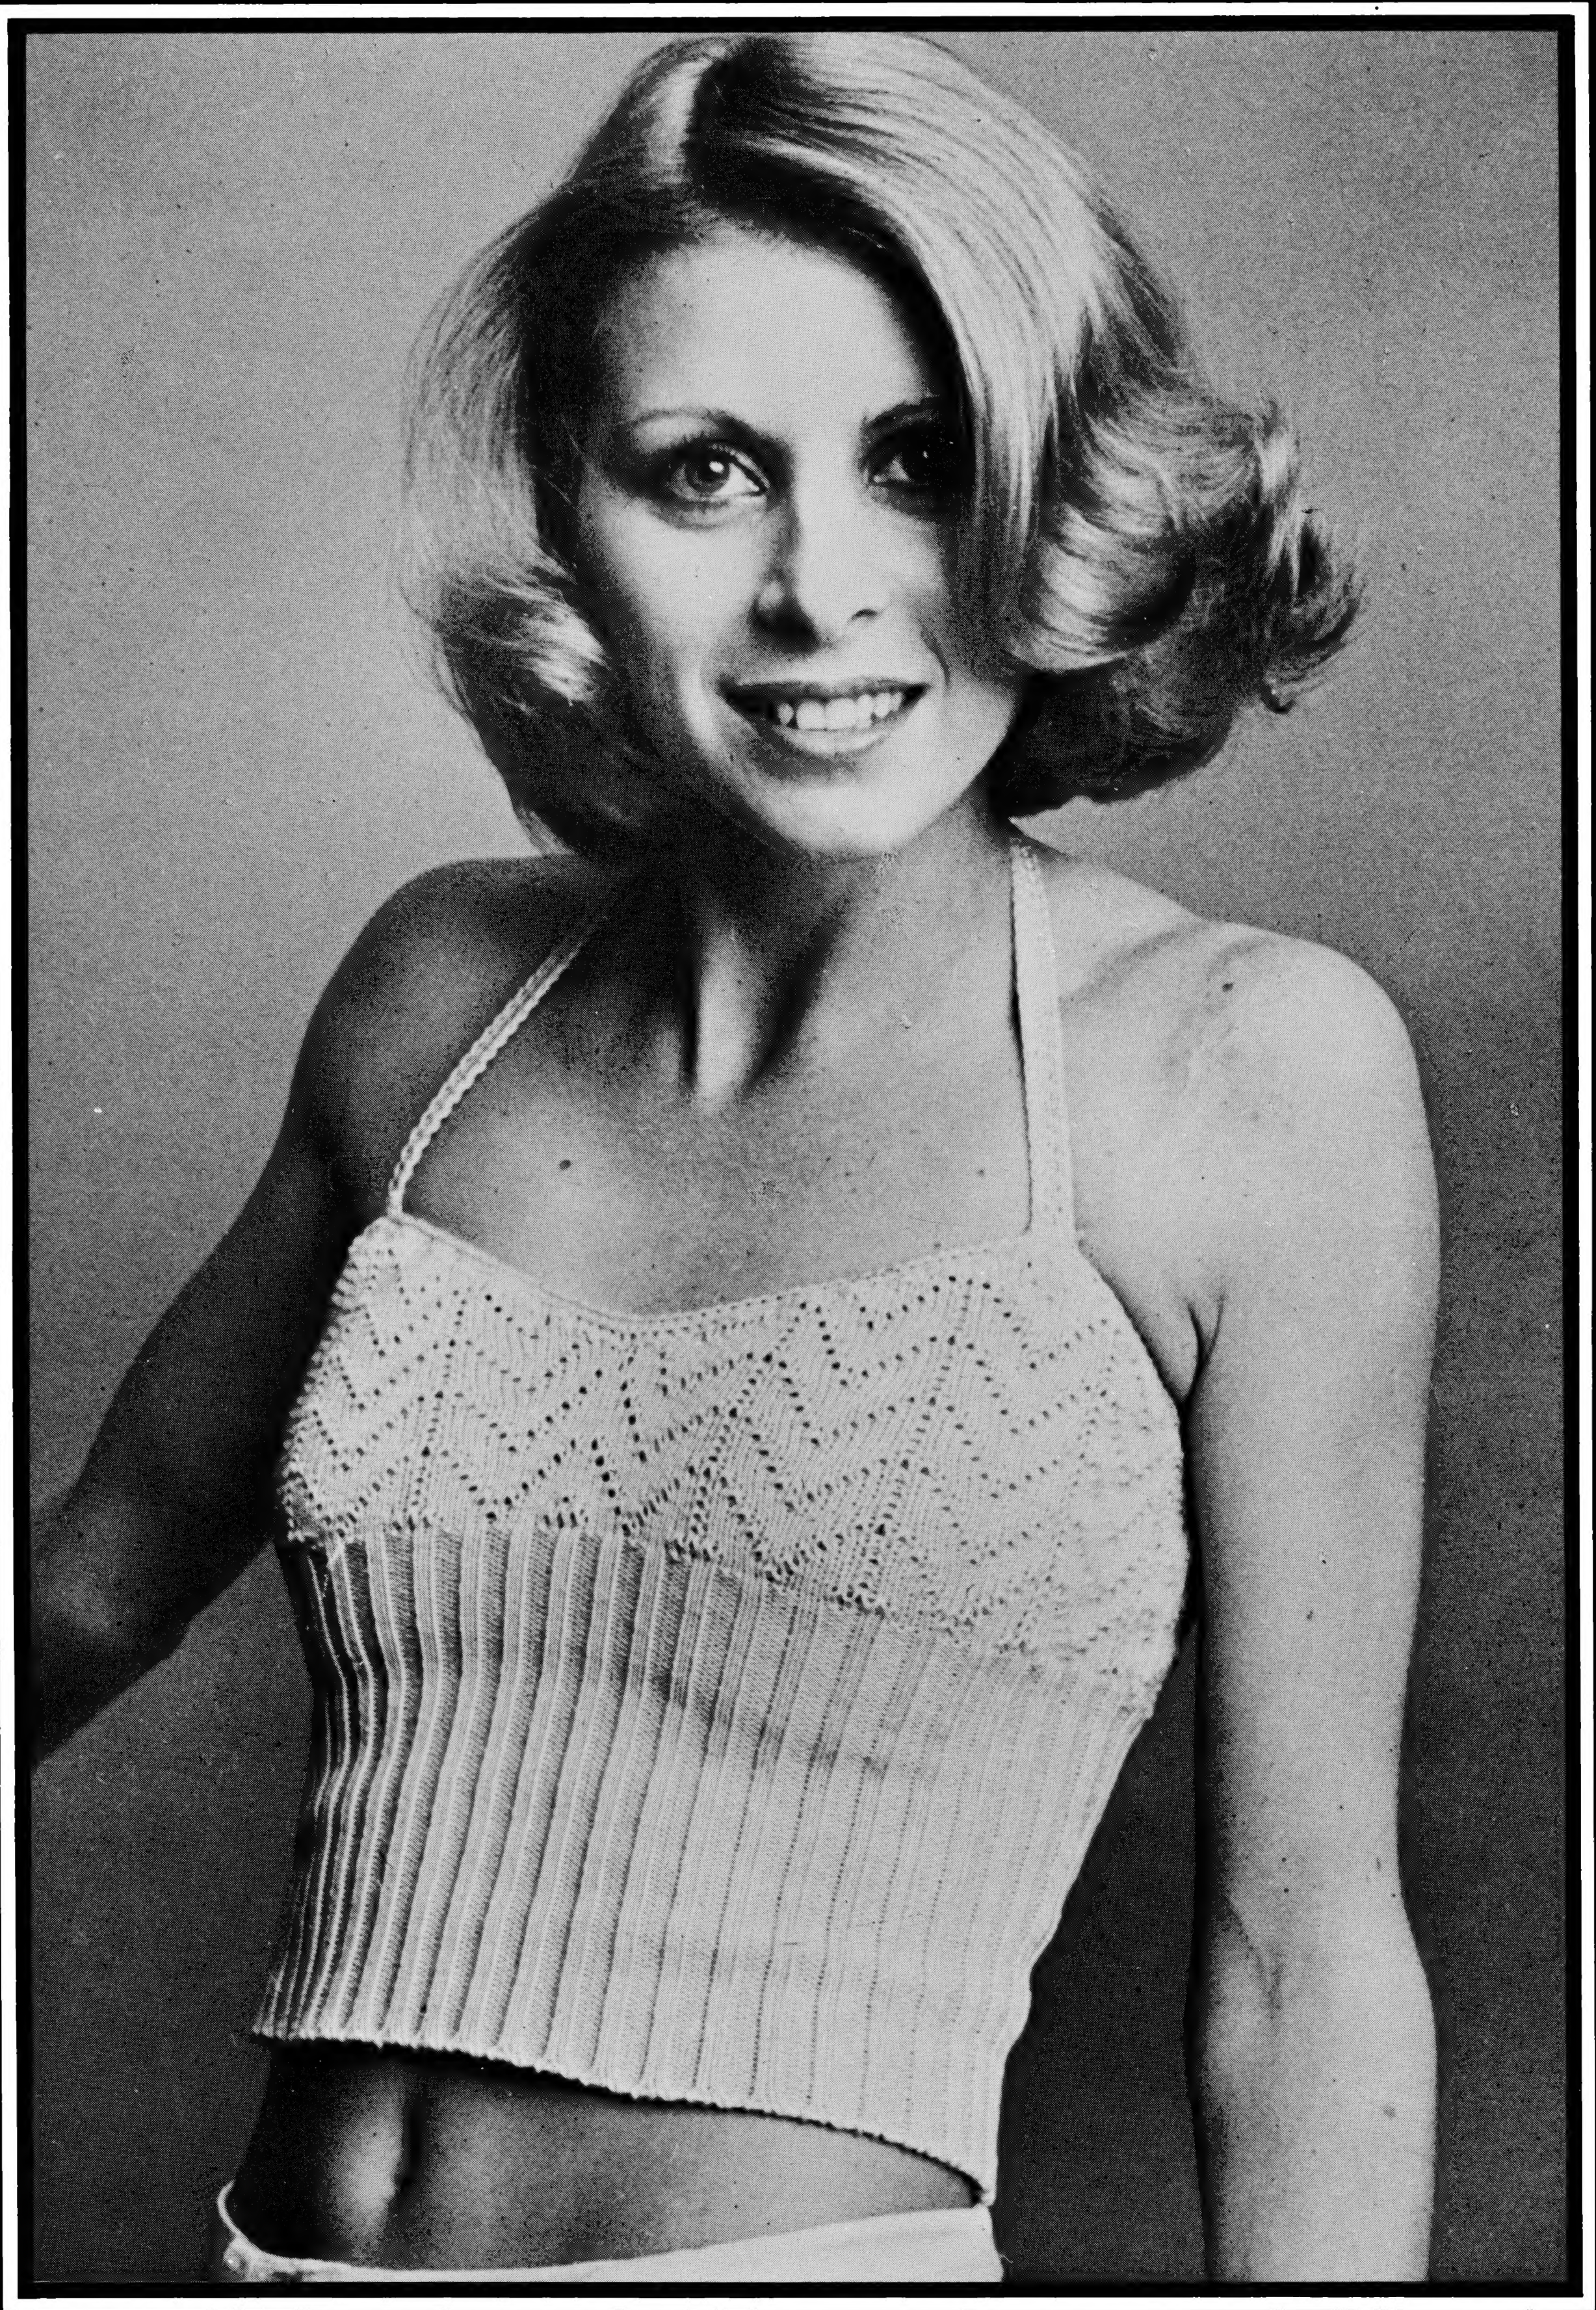

PATTERN No. 4

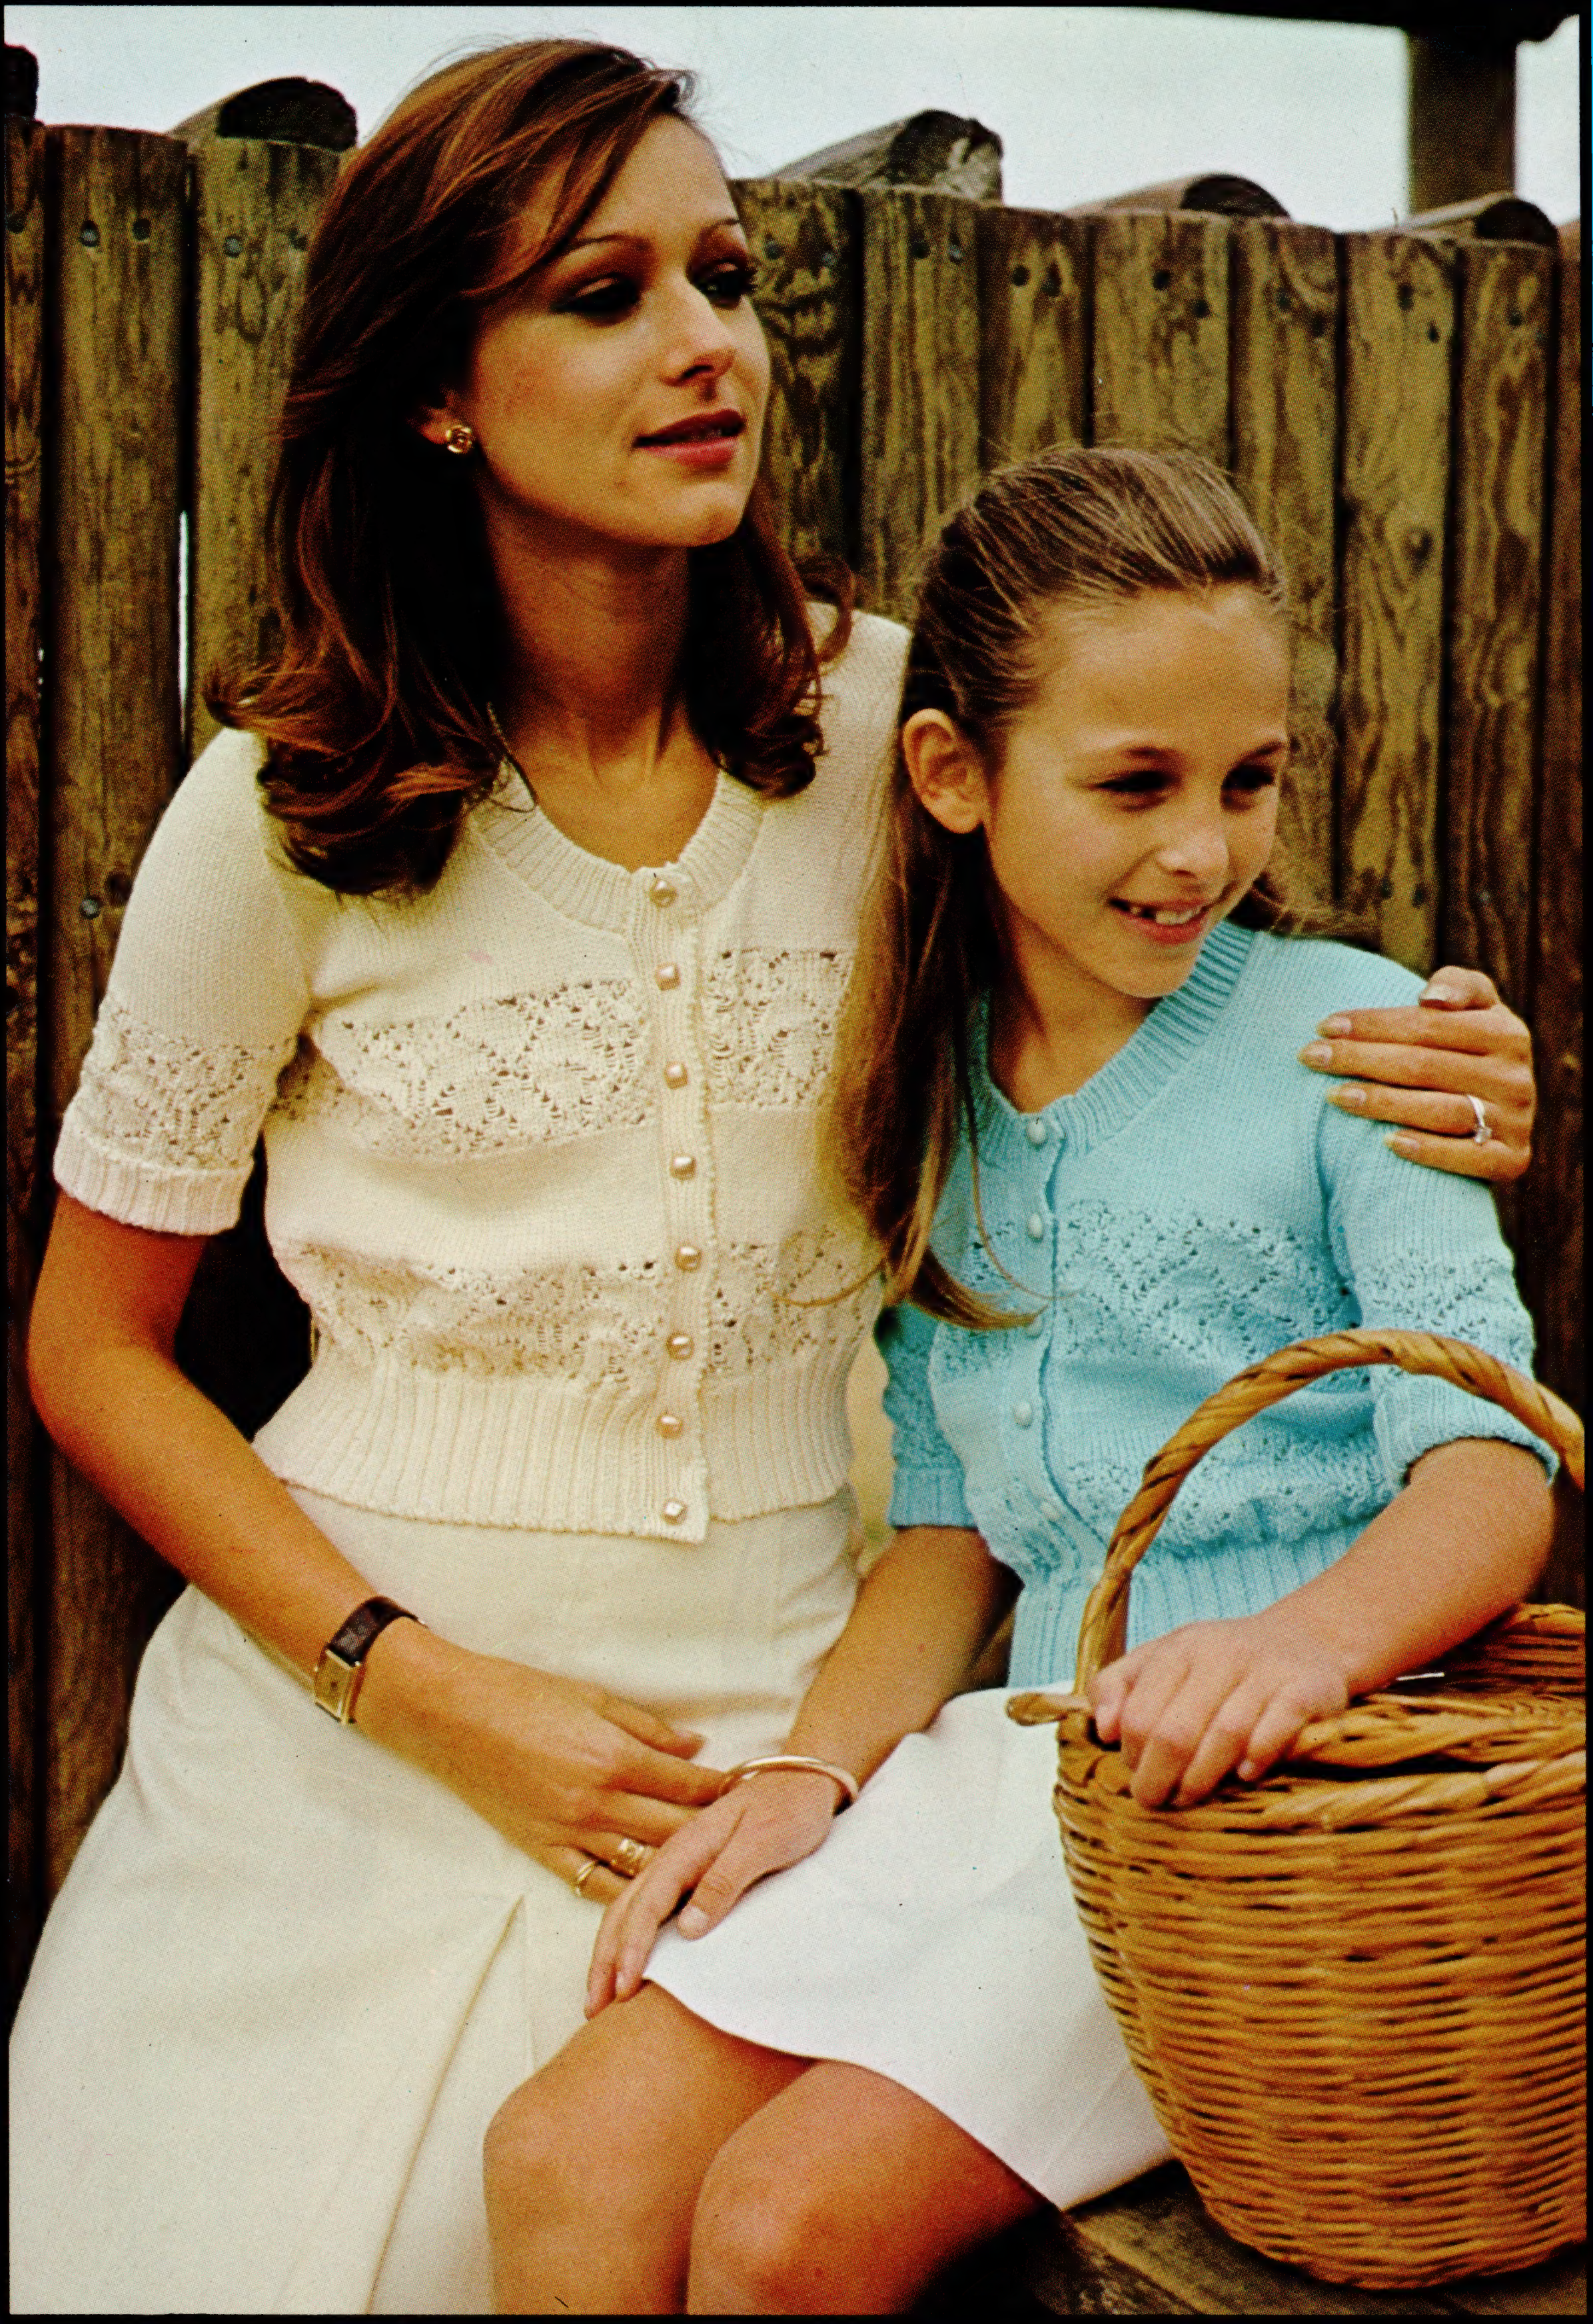

PATTERN No. 5

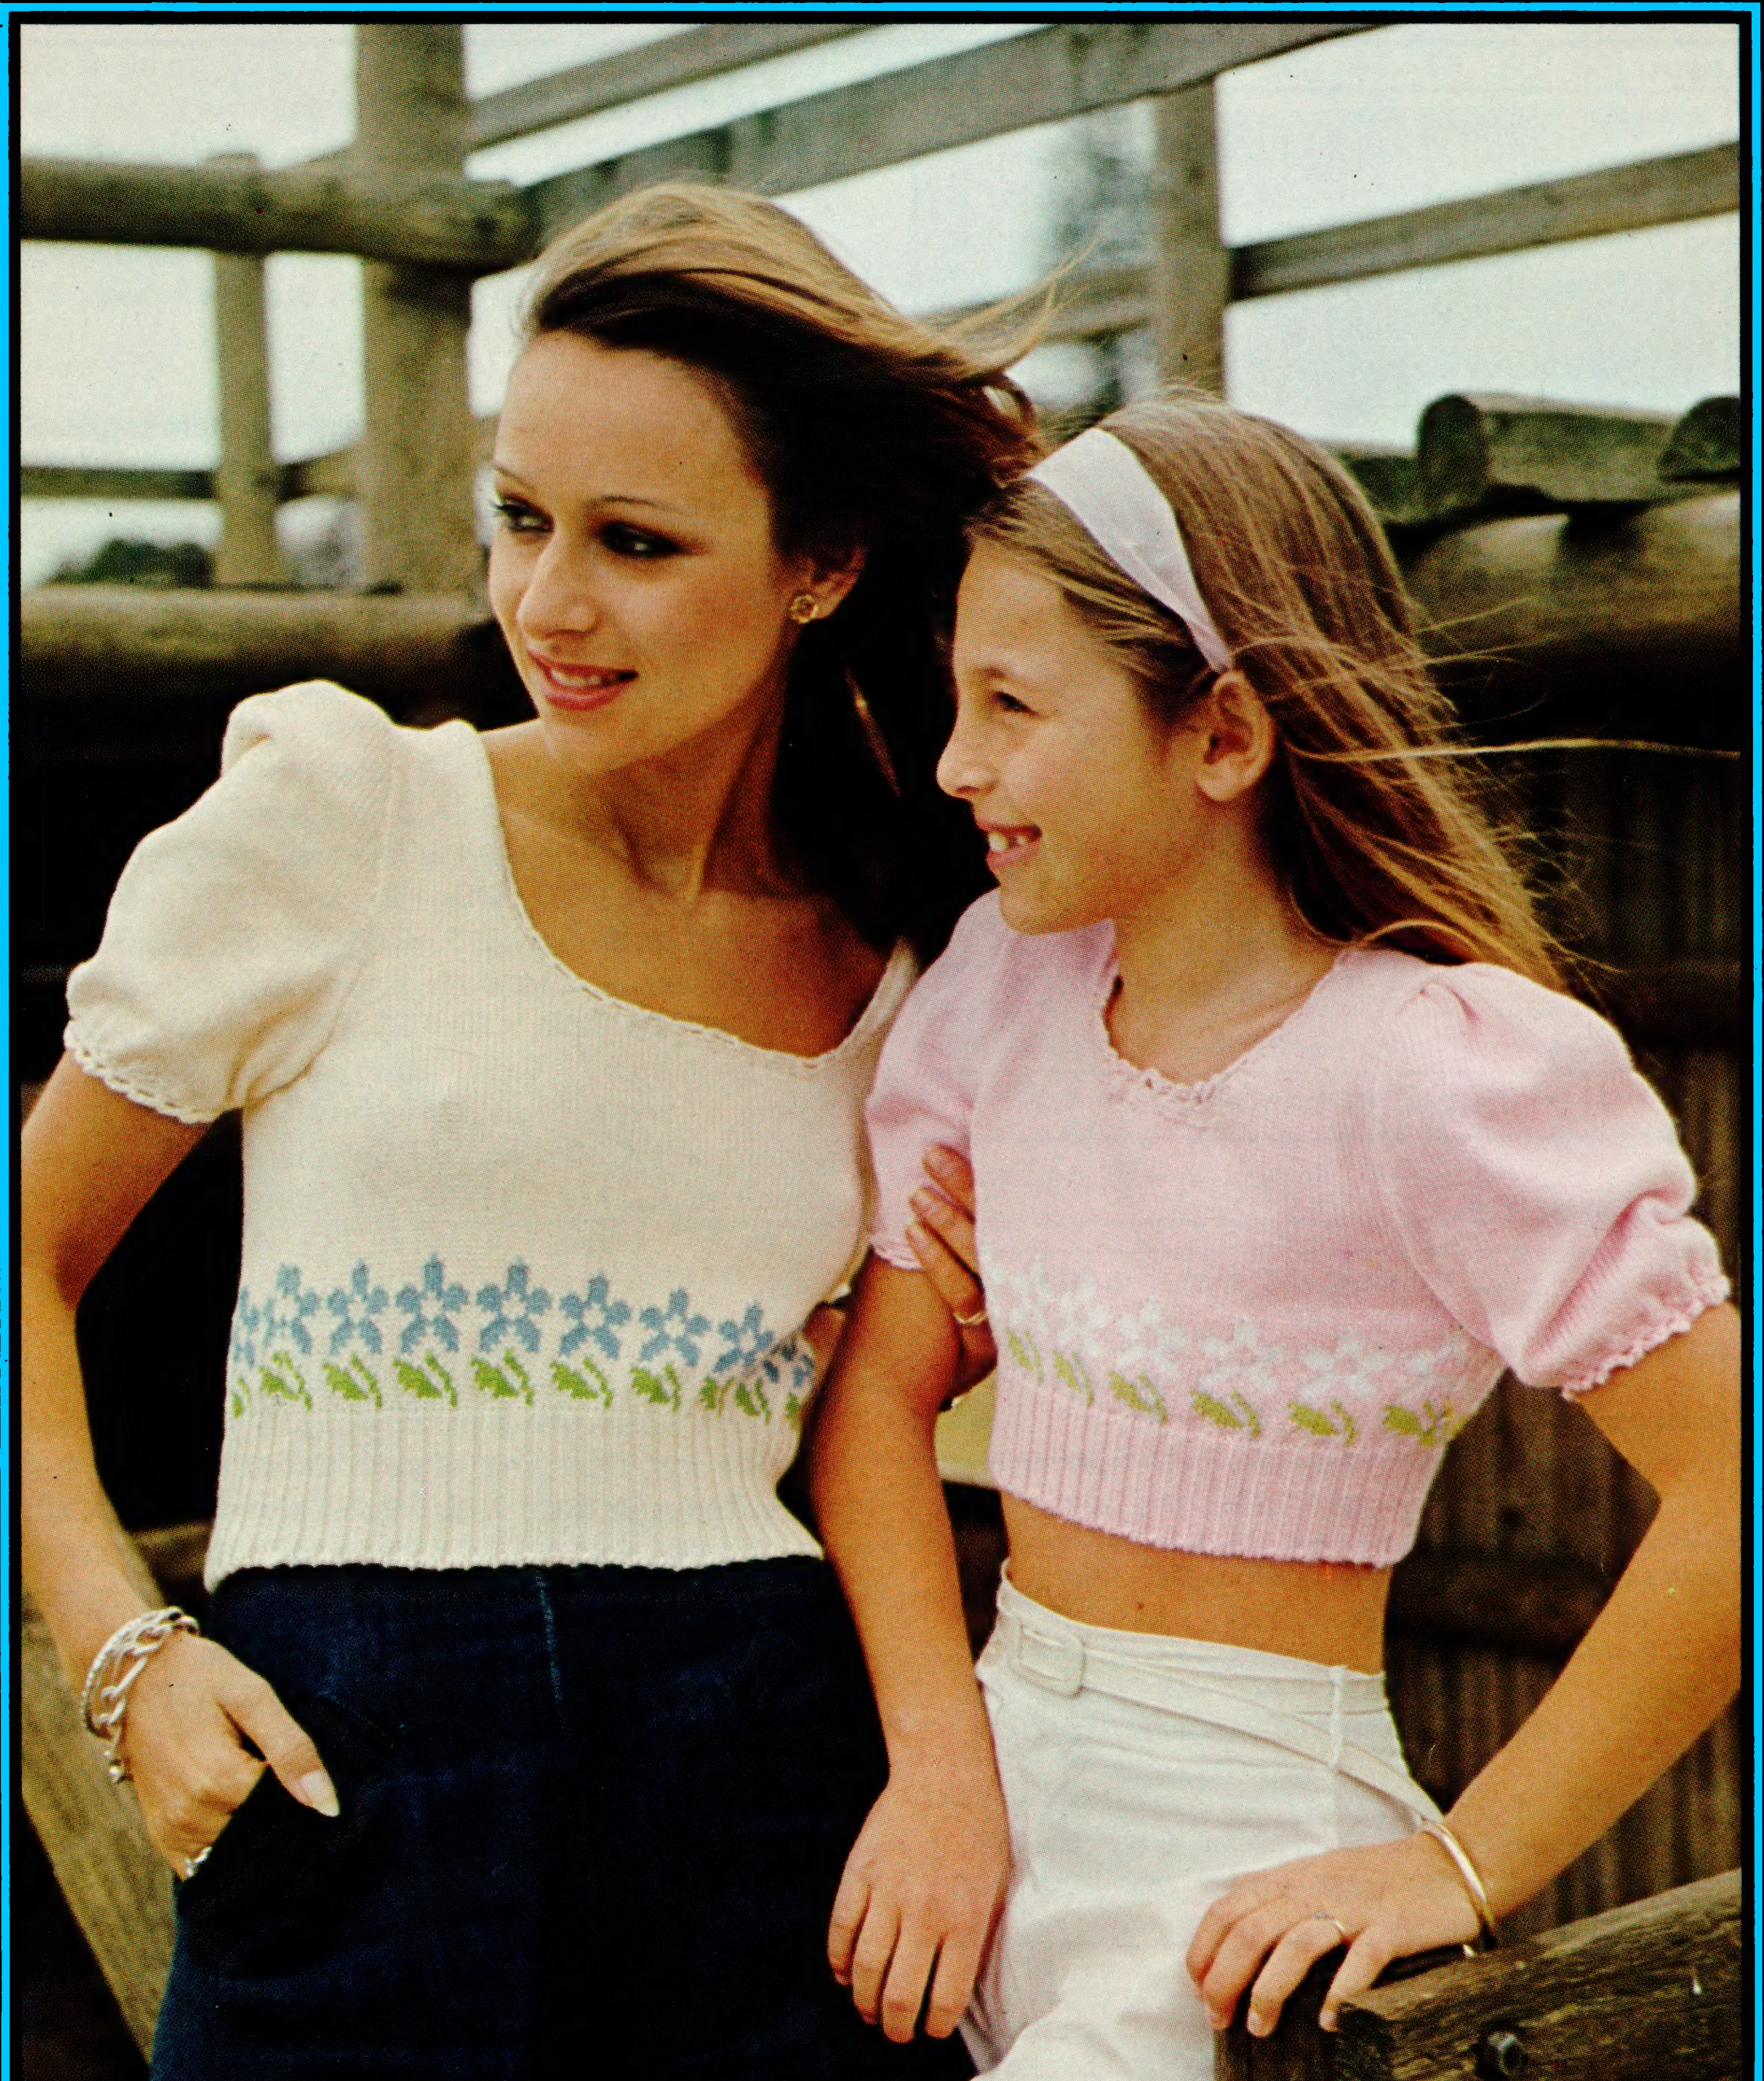

LADY/GIRL CARDIGAN 4

INSTRUCTION SUITABLE FOR MODELS 321, 322, 323, ONLY.

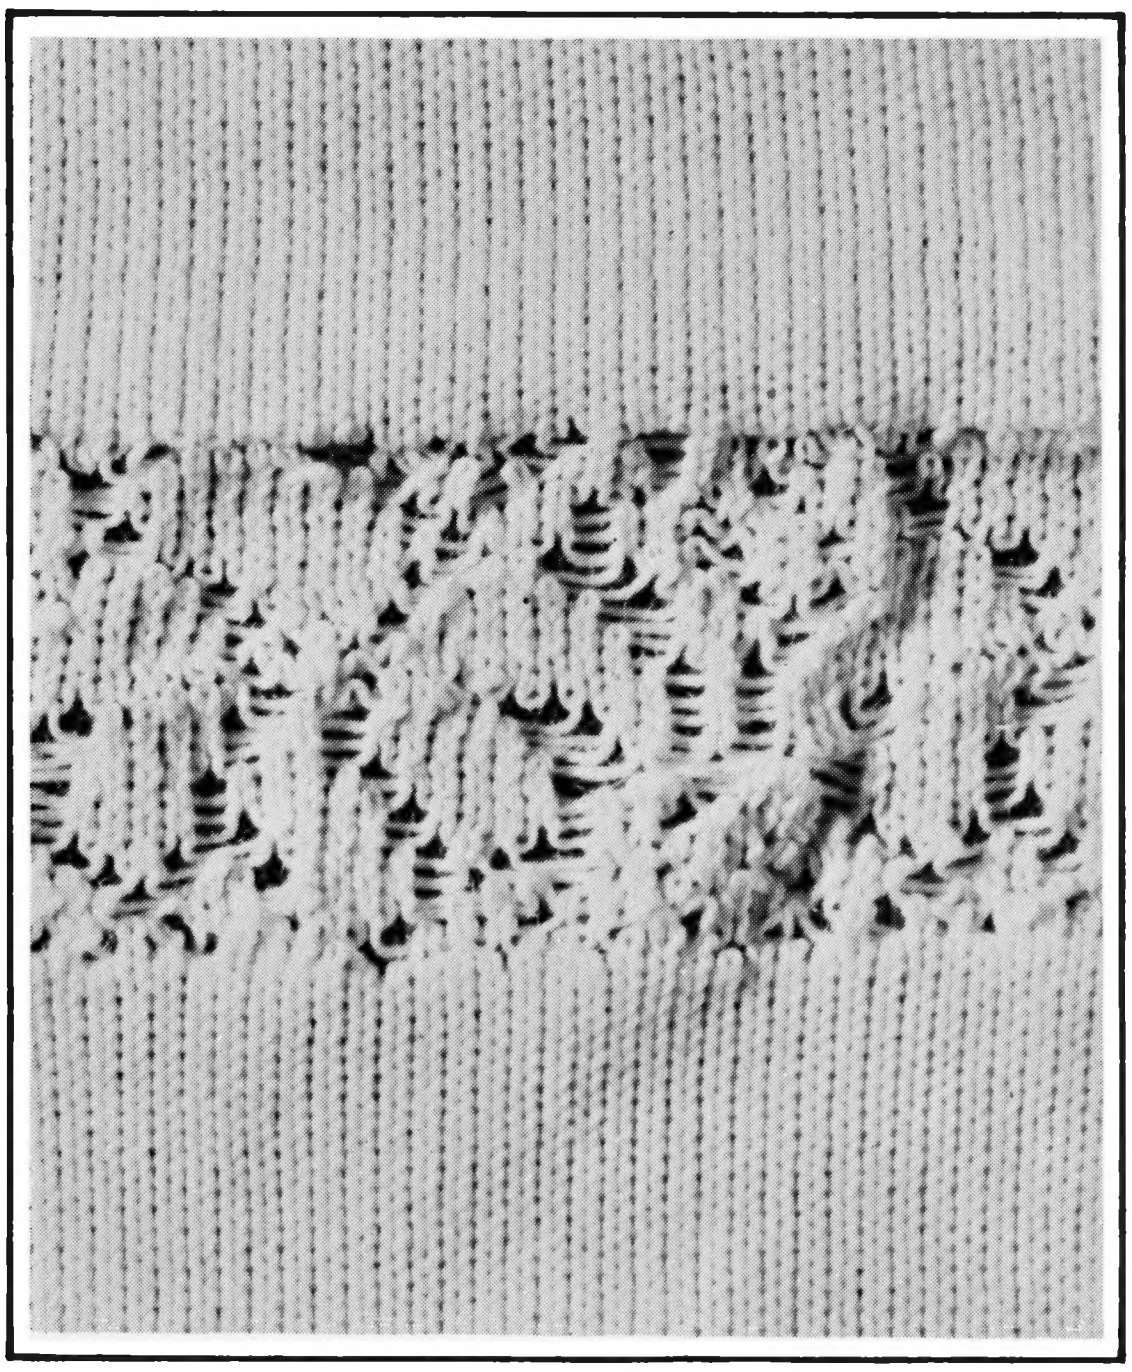

LADY-GIRL CARDIGAN

MEASUREMENTS.

		GIRL			LADY		
SIZE		A	B	C	D	E	F
Underarm/Bust							
	cm	70	75	80	85	90	95
	ins.	27½	29½	31½	33½	35½	37½
Measures	cm	70	75	80	85	90	95
	ins.	27½	29½	31½	33½	35½	37½
Length	cm	39	41	42	45	46	46
	ins.	14¼	16	16½	17¾	18	18
Sleeve Seam							
	cm	88	8	8	8	8	8
	ins.	3¼	3¼	3¼	3¼	3¼	3¼

MATERIALS.

PATONS GEM KNITTING COTTON

50g balls	4	4	5	5	5	5

1 Reel Singer Soft Nylon Thread.

7 (7, 7, 8, 8, 8) Buttons.

PATTERN.

Series 55 - Card 268 A - Punch Lace (3) - Page 8 or

Punch Card as shown for Pattern 6, Memo-matic Pattern Book, Page 218, Punch Lace.

TENSION—29½ sts. and 42 rows to 10 cm (approx. 4 ins.) over st.st. Suggested T.6.1. Check the tension on your machine to ensure accuracy.

BACK—Select 102 (110, 118, 126, 134, 138) needles on main bed and arrange needles on both beds for K.2, P.2 rib (2nd way in Ribber Book) 104 (112, 120, 128, 136, 140) needles in "B" position. Using Gem, cast on for K.2, P.2 rib. Transfer 2 left edge sts. on ribber to the left end needles of main machine. 102 (110, 118, 126, 134, 138) needles in "B" position R.C.O. T.3, K.28 (28, 28, 32, 32, 32) rows, A incr. 1, D dec. 1, E dec. 1, F incr. 2 sts. in last row. 103 (110, 118, 125, 133, 140) sts. Transfer to main bed. ** T.6.1. Using card, set machine for "order 1" and K.1 row. Using both yarns, commence pattern and K.30 rows. *** Stop card. Using M. and stockinet, K.21 (21, 21, 25, 25, 25) rows. Rep. from ** to *** once. 111 (111, 111, 119, 119, 119) rows. ****

Armhole Shaping—R.C.O. Working in st.st. for remainder, cast off 3 (4, 5, 6, 7, 8) sts. at beg. of next 2 rows. Dec. 1 st. at each end of next row and every 2nd row 4 (5, 7, 9, 11, 12) times. 87 (90, 92, 93, 95, 98) sts. K.53 (59, 59, 57, 55, 53) rows.

Shape Shoulders—Cast off 15 sts. at beg. of next 2 rows, then 14 (15, 15, 15, 15, 16) sts. at beg. of following 2 rows. Cast off remaining 29 (30, 32, 33, 35, 36) sts. 68 (76, 80, 82, 84, 84) rows.

LEFT FRONT—Select 50 (54, 58, 62, 66, 70) needles on main bed and arrange needles on both beds for K.2, P.2 rib (2nd way in Ribber Book) 52 (56, 60, 64, 68, 72) needles in "B" position. Using Gem, cast on for K.2, P.2 rib. Transfer 2 left edge sts. on ribber to the left end needles of main machine. 50 (54, 58, 62, 66, 70) needles in "B" position. R.C.O. T.3, K.28 (28, 28, 32, 32, 32) rows, A, B and C only – incr. 1 st. at end of last row. 51 (55, 59, 62, 66, 70) sts. Work as from ** to **** for Back.

Knit 1 row.

Armhole Shaping—R.C.O. Working in st.st. for remainder, cast off 3 (4, 5, 6, 7, 8) sts. at beg. of next row. Dec. 1 st. at armhole edge in next row and every 2nd row 4 times. 43 (46, 49, 51, 54, 57) sts. K.1 row.

Shape Neck—Cast off 5 (6, 7, 7, 8, 9) sts. at beg. of next row, then dec. 1 st. at neck edge in every 2nd row 9 times, B, C, D, E and F only – at same time dec. 1 st. at armhole edge in next row and every 2nd row (0, 2, 4, 6, 7) times. 29 (30, 30, 30, 30, 31) sts. K.34 (42, 46, 48, 50, 50) rows.

Shape Shoulder—Cast off 15 sts. at beg. of next row. K.1 row. Cast off. 66 (74, 78, 80, 82, 82) rows.

RIGHT FRONT—Work as for Left Front, reversing shapings.

SLEEVES—Select 62 (66, 74, 78, 82, 86) needles on main bed and arrange needles on both beds for K.2, P.2 rib (2nd way in Ribber Book) 64 (68, 76, 80, 84, 88) needles in "B" position. Using Gem, cast on for K.2, P.2 rib. Transfer 2 left edge sts. on ribber to the left end needles of main machine 62 (66, 74, 78, 82, 86) needles in "B" position. R.C.O. T.5, K.16 rows. T.3, K.16 rows. Knit 5 rows waste knitting and remove from machine. Carriage on left reverse work and replace on main bed, removing waste knitting. Work as from ** to *** for Back. 63 rows.

Armhole Shaping—R.C.O. Working in st.st. for remainder, cast off 1 (2, 2, 3, 3, 4) st/s. at beg. of next 2 rows. Dec. 1 st. at each end of next row and every 4th row 6 (8, 5, 5, 4, 3) times, then in every 2nd row 10 (9, 16, 17, 20, 22) times. 26 sts. K.1 row. Cast off. 48 (54, 56, 58, 60, 60) rows.

RIGHT FRONT BAND—Using Gem, cast on for K.1, P.1 rib 13 sts. R.C.O. T.3, K.3 rows. Make buttonhole. Counting from side edge of band, place 4th st. on main machine on to 5th needle and 3rd st. on ribber on to 4th needle. K.1 row. Work a buttonhole in this manner in every 16th row 6 (6, 6, 7, 7, 7) times. 7 (7, 7, 8, 8, 8) buttonholes. K.2 rows. Cast off.

LEFT FRONT BAND—Work as for other band, omitting buttonholes.

NECKBAND—Using Gem, cast on for K.1, P.1 rib 123 (135, 137, 139, 141, 143) sts. T.3, K.13 rows. Cast off.

MAKE UP—With a slightly damp cloth and warm iron, press lightly. Using back-stitch, sew up side, shoulder and sleeve seams. Sew in sleeves. Sew cast off edge of neckband to neckline. Sew front bands in position. Sew on buttons. Press seams.

Lady/girl Jumper

5

INSTRUCTION SUITABLE MODELS 321, 322, 323.

MEASUREMENTS.

SIZE		**A**	**B**	**C**	**D**	**E**	**F**
Underarm/Bust							
	cm	70	75	80	85	90	95
	ins.	27½	29½	31½	33½	35½	37½
Measures	cm	70	75	80	85	90	95
	ins.	27½	29½	31½	33½	35½	37½
Length	cm	31	35	40	42	43	44
	ins.	12¼	13¾	15¾	16½	17	17¼
Sleeve Seam	cm	4	5	6	6	6	7
	ins.	1½	2	2⅜	2⅜	2⅜	22¾

MATERIALS.

PATONS GEM KNITTING COTTON

Main Colour						
50g balls	3	3	3	4	4	4

C.C.1 50g balls. Small quantity

C.C.2 50g balls. Small quantity

Length of round elastic.

3.00 (No. 10 - 11) "Disc" Crochet Hook.

PATTERN.

Punch card as shown for Pattern. 18 Memo-matic Pattern Book P.6 – Fair Isle. (Flowers in lower half of graph).

TENSION—29½ sts. and 42 rows to 10 cm (approx. 4 ins.) over st.st. Suggested T.6.1. Check the tension on your machine to ensure accuracy.

BACK—Select 102 (110, 118, 126, 130, 138) needles on main bed and arrange needles on both beds for K.2, P.2 rib (2nd way in Ribber Book) 104 (112, 120, 128, 132, 140) needles in "B" position. Using M.C., cast on for K.2, P.2 rib.

Transfer 2 left edge sts. on ribber to the left end needles of main machine. 102 (110, 118, 126, 130, 138) needles in "B" position. R.C.O. T.3, K.26 (30, 30, 34, 34, 34) rows, A incr. 1, D dec. 1, E incr. 2, F incr. 2 sts. in last row. 103 (110, 118, 125, 132, 140) sts. Transfer to main bed. T.7.1, using card, set machine for order 1 row No. 3 and K.1 row. Using C.C.1 in F.2 commence pattern and K.7 rows. C.C.2 in F.2, K.13 rows. Stop card. T.6.1. Using M.C. only, K.8 (18, 36, 40, 40, 40) rows. 55 (69, 87, 95, 95, 95) rows.

Armhole Shaping—R.C.O. Cast off 5 (5, 6, 8, 9, 10) sts. at beg. of next 2 rows. ** Dec. 1 st. at each end of next row and every 2nd row 3 (4, 6, 7, 8, 9) times. 85 (90, 92, 93, 96, 100) sts. K.61 (63, 63, 67, 69, 71) rows.

Shape Shoulders—Cast off 10 (10, 10, 10, 11, 11) sts. at beg. of next 2 rows, then 9 (10, 10, 10, 10, 11) sts. at beg. of following 2 rows. Cast off remaining 47 (50, 52, 53, 54, 56) sts. 74 (78, 82, 88, 92, 96) rows.

FRONT—Work as for Back to **. Dec. 1 st. at each end of next row and every 2nd row 3 (4, 6, 3, 5, 7) times. 85 (90, 92, 101, 102, 104) sts. K.19 (15, 11, 1, 1, 1) row/s.

Shape Neck—K.56 (60, 62, 67, 68, 70) needles opposite carriage on to 6 rows waste knitting and push same needles into A position. (Waste knitting prevents brushing up of yarn). A, B and C only – K.1 row. D, E and F only – K.1 row, dec. 1 st. at beg. of row.

All Sizes—Dec. 1 st. at neck edge in every row 4 times, then in every alt. row 6 times, D, E and F only – at same time dec. 1 st. at armhole edge in every 2nd row (3, 2, 1) time/s. 19 (20, 20, 20, 21, 22) sts. K.25 (31, 35, 57, 57, 57) rows.

Shape Shoulder—Cast off 10 (10, 10, 10, 11, 11) sts. at beg. of next row. K.1 row. Cast off. 72 (76, 80, 86, 90, 94) rows. Pull undone waste knitting and return needles into "B" position. Cast off 27 (30, 32, 33, 34, 36) sts. at centre. R.C.28 (26, 26, 10, 14, 18). Knit to correspond with other side.

SLEEVES—Carriage on right, bring 91 (95, 99, 101, 111, 115) needles into "D" position, then handwind M.C. from left to right as in instruction book. R.C.O. T.6.1, K.18 (20, 22, 26, 26, 28) rows.

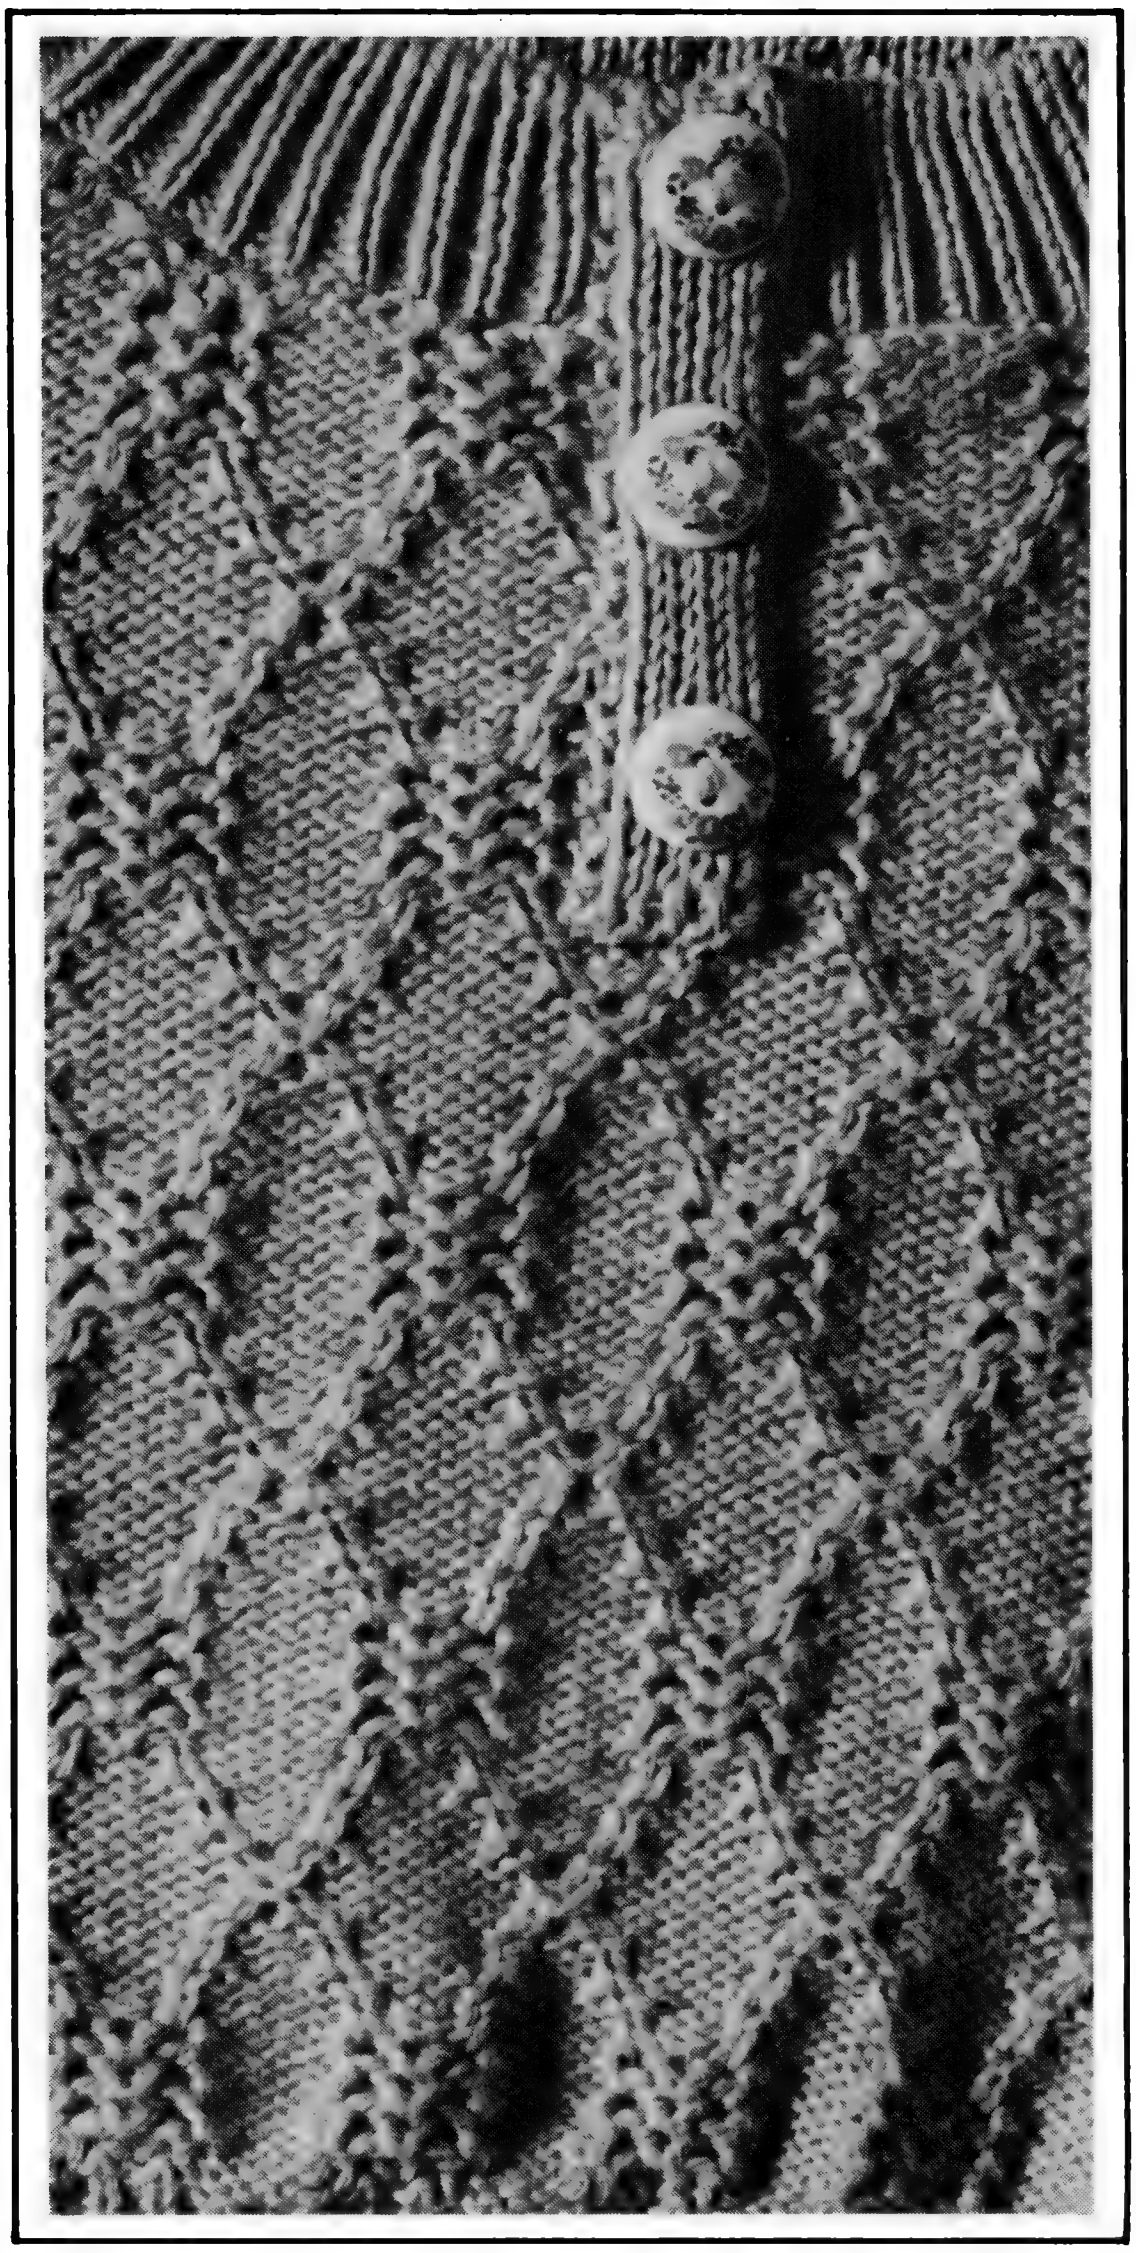

LADY-GIRL JUMPER

Armhole Shaping—R.C.O. Cast off 2 (2, 3, 4, 5, 5) sts. at beg. of next 2 rows. Dec. 1 st. at each end of next row and every following 4th row 11 (11, 12, 15, 13, 13) times, then in every 2nd row 11 (13, 13, 10, 16, 18) times. 41 sts. K.1 row. Cast off. 70 (74, 78, 84, 88, 92) rows.

MAKE UP—With a slightly damp cloth and warm iron, press lightly. Using back-stitch, sew up side, shoulder and sleeve seams. Sew in sleeves gathering sleeve at top. ** Using crochet hook and M.C. work 1 round double crochet evenly around sleeve edge making a multiple of 4. Work another round over hat elastic, keeping work firm. Work next round as follows:—

* 5 chain miss 3 double crochet, 1 double crochet in next double crochet, rep. from * to end. ** Work around neck as from ** to ** for sleeves. Press seams.

PATTERN No. 6

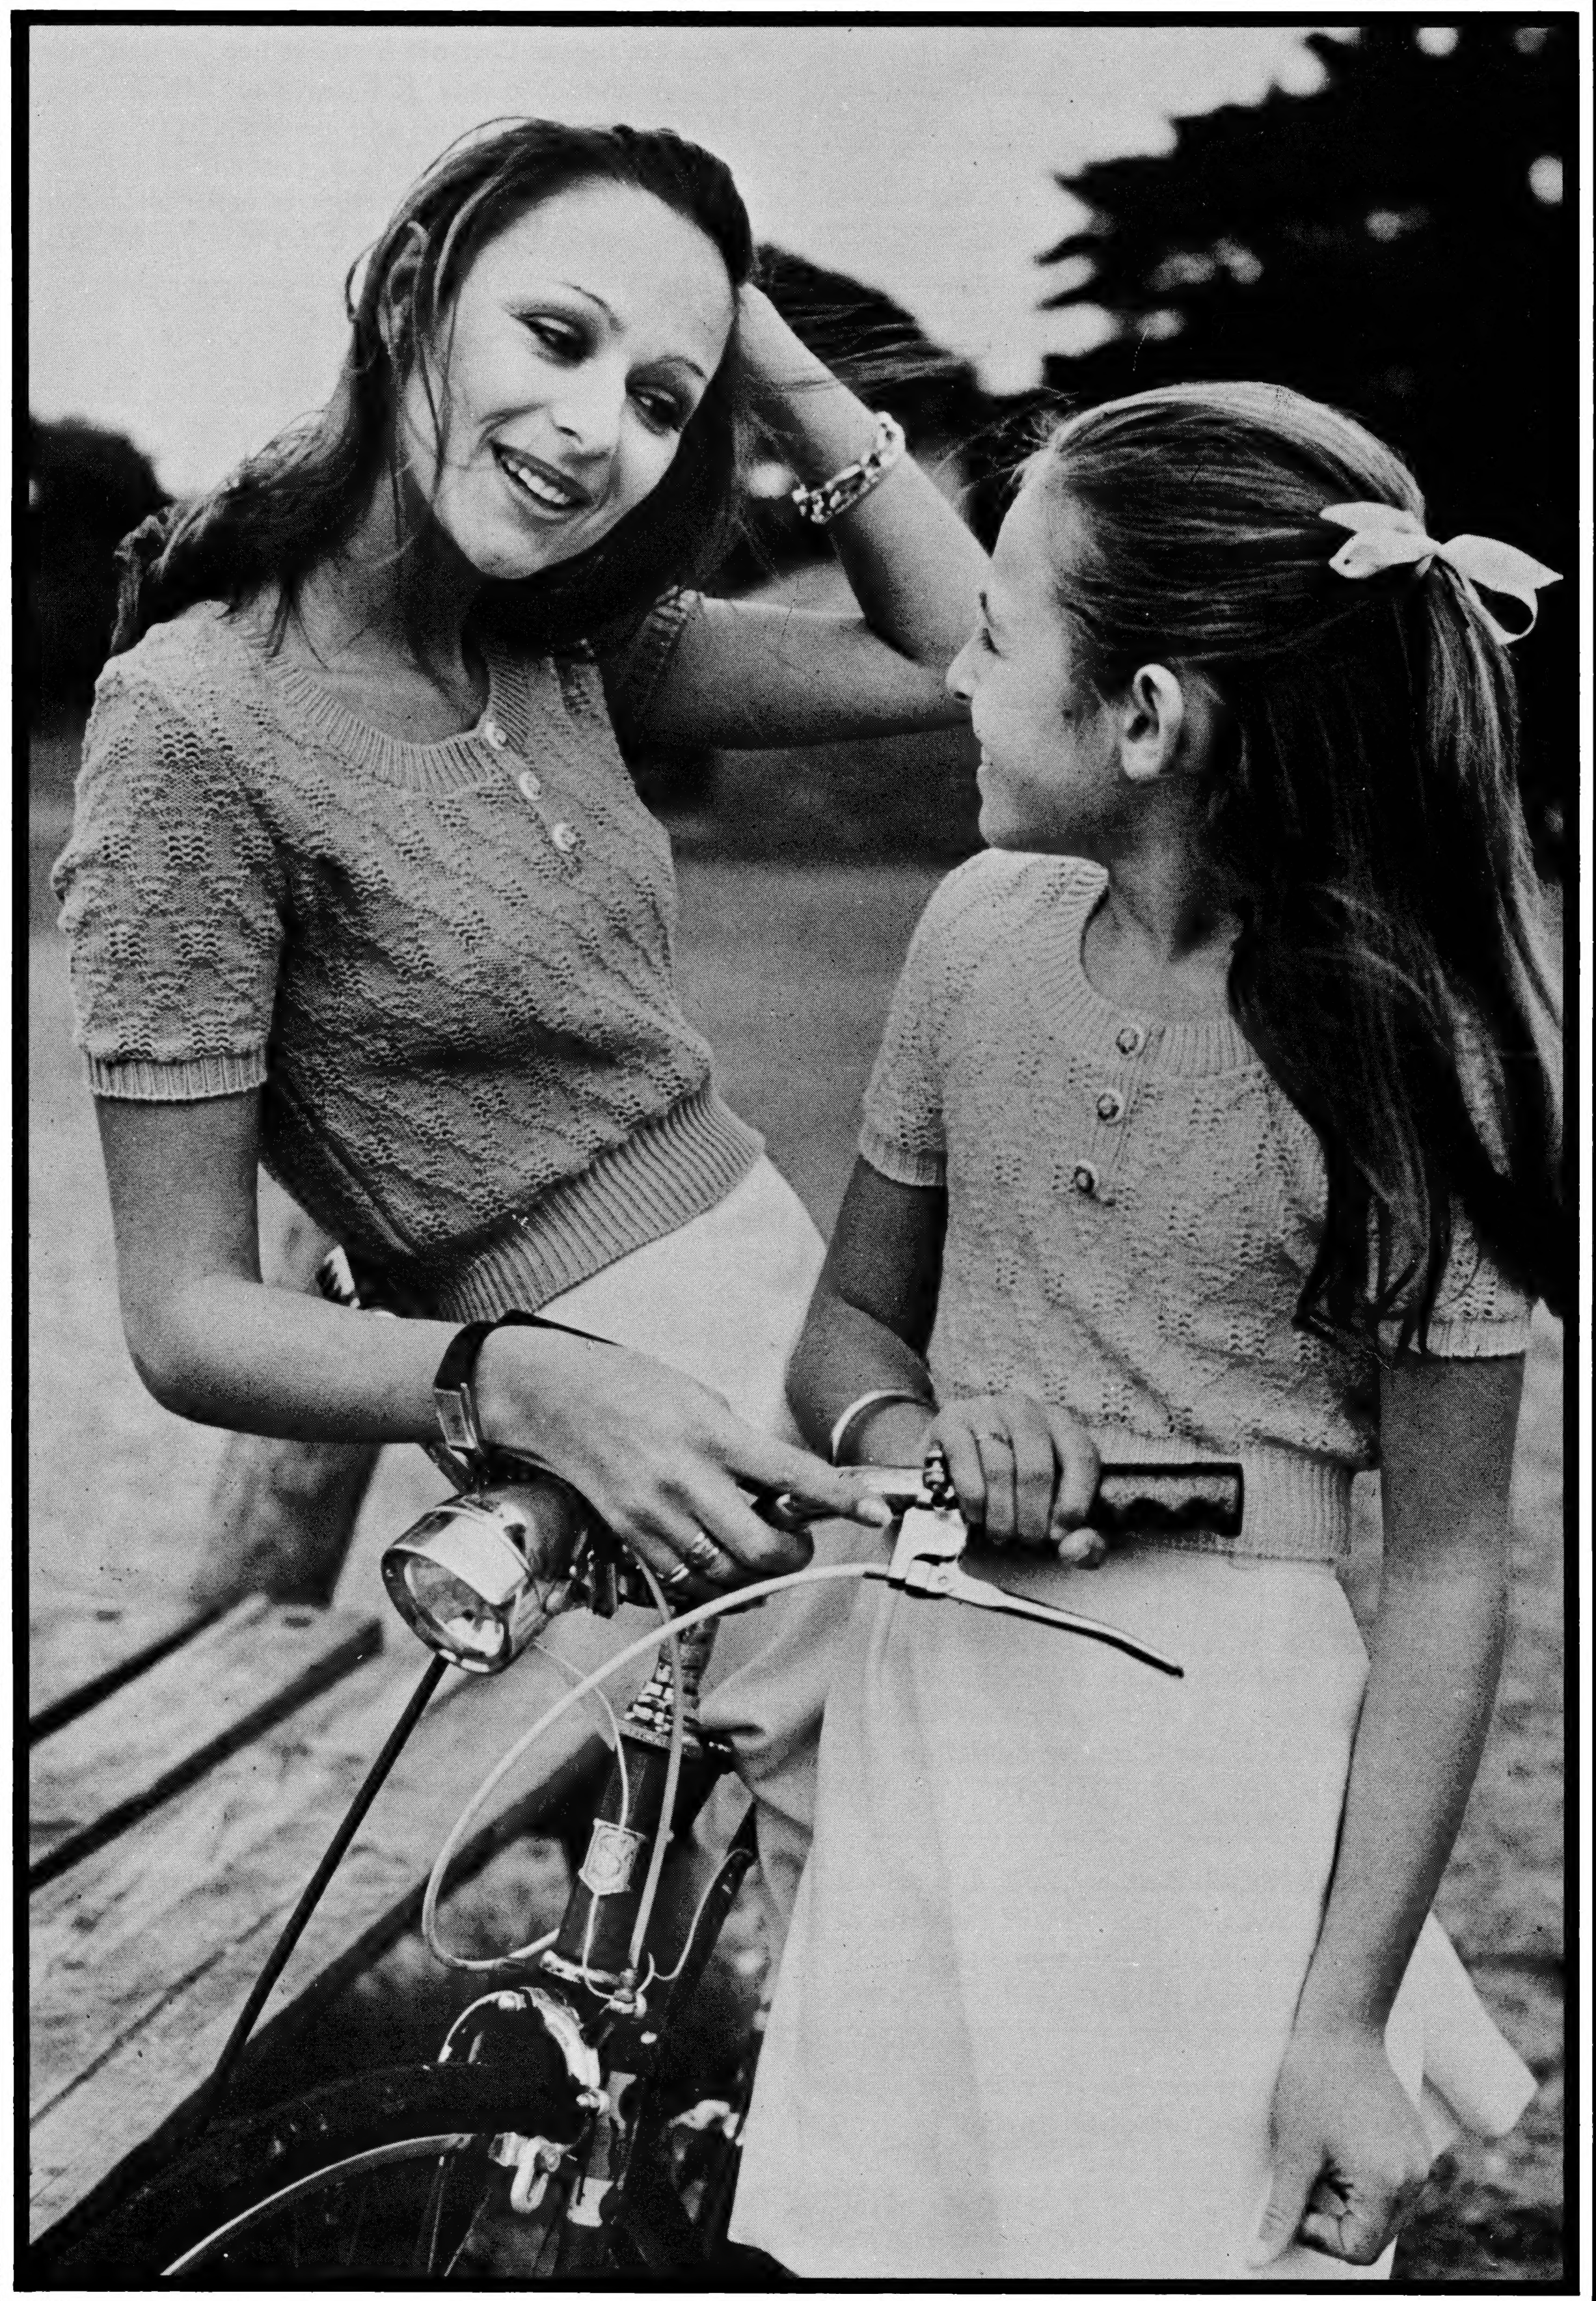

LADY/GIRL JUMPER 6

INSTRUCTION SUITABLE MODELS 312, 313, 321, 322, 323.

MEASUREMENTS

SIZE		A	B	C	D	E
Underarm/Bust	cm	70	75	80	85	90
	ins.	27½	29½	31½	33½	35½
Measures	cm	65	70	75	80	85
	ins.	25½	27½	29½	31½	33½
Length	cm	34	38	43	43	44
	ins.	13	15½	17½	17½	17¼
Sleeve Seam	cm	5	5½	6	6	6
	ins.	2	2⅛	2⅜	2⅜	2⅜

MATERIALS.

PATONS GEM KNITTING COTTON

50g balls	3	3	4	4	5

3 Buttons.

PATTERN.

Models 321, 322, 323. Series 51 - No. 223 A - Tuck (4) P.2.

Models 312, 313. Series 21 - No. 23 A - Tuck

TENSION—25 sts. and 60 rows to 10 cm (approx. 4 ins.) over patt. Suggested T.6.1. Check the tension on your machine to ensure accuracy.

BACK—Cast on for K.1, P.1 rib 81 (87, 95, 101, 107) sts. R.C.O. T.2 K.28 (28, 32, 32, 32) rows. Transfer to main bed. T.6.1. Using card set machine for "order 1" and K.1 row. Commence pattern and K.72 (84, 98, 98, 98) rows. 101 (113, 131, 131, 131) rows.

Armhole Shaping—R.C.O. Cast off 2 (3, 4, 5, 6) sts. at beg. of next 2 rows. ** Dec. 1 st. at each end of next row and every following 4th row 3 (4, 6, 7, 8) times. 69 (71, 73, 75, 77) sts. K.41 (49, 47, 53, 55) rows.

Shape Neck—Note card row No. in window. K.43 (45, 47, 49, 51) needles opposite carriage on to 6 rows waste knitting, push same needles in "A" position (waste knitting prevents brushing up of yarn). K.1 row. Dec. 1 st. at neck edge in every 2nd row 10 times. 16 sts. K.15 rows.

Shape Shoulder—Cast off 5 sts. at beg. of next row and following 2nd row. K.1 row. Cast off. 96 (108, 114, 124, 130) rows. Pull undone waste knitting and return needles to "B" position. Cast off 17 (19, 21, 23, 25) sts. at centre. Rememorize carriage to card row No. previously noted. R.C. 56 (68, 74, 84, 90). Knit to correspond with other side.

FRONT—Work as for Back to **. Dec. 1 st. at each end of next row and every following 4th row 3 (4, 4, 4, 4) times. 69 (71, 77, 81, 85) sts. K.7 (3, 3, 3, 3) rows.

Shape Neck—Note card row number in window. K.43 (45, 49, 52, 55) needles opposite carriage on to 6 rows waste knitting. Push same needles in "A" position (waste knitting prevents brushing up of yarn). K.1 row, C, D and E only – dec. 1 st. at beg. of row. Dec. 1 st. at neck edge in every 2nd row 10 times, C, D and E only – at same time dec. 1 st. at armhole edge in every following 4th row (1, 2, 3) time/s. 16 sts. K.49 (61, 67, 77, 83) rows.

Shape Shoulder—Cast off 5 sts. at beg. of next row and following 2nd row. K.1 row. Cast off. 96 (108, 114, 124, 130) rows. Pull undone waste knitting and return needles to "B" position. Cast off 17 (19, 21, 23, 25) sts. at centre. Rememorize carriage to card row No. previously noted. R.C.22. Knit to correspond with other side.

SLEEVES—Cast on for K.1, P.1 rib 51 (55, 59, 63, 69) sts. R.C.O. T.2, K.12 rows. Transfer to main bed. Using card, set machine for "order 1" and K.1 row. Commence pattern and K.2 rows. Incr. 1 st. at each end of next row and every following 4th (4th, 6th, 6th, 6th) row twice. 57 (61, 65, 69, 75) sts. K.1 (7, 9, 9, 9) row/s. 25 (31, 37, 37, 37) rows.

Armhole Shaping—R.C.O. Cast off 1 (1, 2, 2, 3) st/s. at beg. of next 2 rows. Dec. 1 st. at each end of next row and every following 6th row 0 (1, 3, 3, 1) time/s, then in every following 4th row 16 (17, 15, 17, 21) times. 21 (21, 23, 23, 23) sts. K.1 row. 68 (78, 82, 90, 94) rows.

NECKBAND—Cast on for K.1, P.1 rib 159 (179, 189, 197, 199) sts. R.C.O. T.2, K.13 rows. Cast off loosely.

CENTRE FRONT BAND—Cast on for K.1, P.1 rib 9 sts. R.C.O. T.2, K.32 rows. Cast off.

MAKE UP—Using back-stitch, sew up side, shoulder and sleeve seams. Sew in sleeves.

Sew cast off edge of neckband to neck edge making join at centre front. Slip stitch front band piece in position. Sew on button.

EQUIVALENT BASIC PUNCH CARD STITCH DESIGNS
FOR MODELS 321 & 322/323
TO ENABLE 322/323 OWNERS TO USE PREVIOUS PATTERN BOOKS

321 CARDS	page	EQUIV 322/323 CARD	page	321 CARDS	page	EQUIV 322/323 CARD	page
TUCK KNITTING							
1a Solid (2)	20	1a Solid (2)	35	7a Solid (3)	23	7a Solid (4)	36
1a Appli. (3)	27	1a Appli. (2)	38	7a Resting (1)	27	7a Resting (3)	37
1a Colours (4)	26	1a Colours (4)	41	7a Appli. (1)	27	7a Appli. (1)	38
3a Solid (8)	22	3a Solid (8)	36	7a Colours (2)	25	7a Colours (2)	40
3a Resting (1)	23	3a Resting (1)	37	7a Colours (3)	25	7a Colours (3)	40
3a Appli. (4)	27	3a Appli. (3)	38	8a Solid (3)	22	8a Solid (3)	35
3a Appli. (5)	28	3a Appli. (4)	38	9a Solid (7)	22	9a Solid (7)	36
3a Colours (6)	26	3a Colours (6)	41	10a Solid (5)	22	10a Solid (5)	36
3a Colours (7)	26	3a Colours (7)	41	11a Solid (9)	22	11a Solid (9)	36
4a Solid (12)	23	4a Solid (11)	37	12a Solid (1)	20	12a Solid (1)	34
4a Resting (2)	23	4a Resting (2)	37	12a Appli. (6)	29	12a Appli. (1)	41
4a Colours (5)	26	4a Colours (5)	41	12a Colours (1)	24	12a Colours (1)	39
6a Solid (11)	23	New card design	–	14a Solid (–)	–	14a Solid (6)	36
6a Appli. (2)	27	New card design	–	18a Solid (10)	23	18a Solid (10)	37
6a Colours (8)	26	New card design	–	19a Solid (6)	22	New card design	–
6a Colours (9)	26	New card design	–				
SLIP PATTERNS							
1a Solid (5)	30	1a Solid (5)	43	8a Colours (8)	34	8a Colours (8)	47
2a Solid (6)	30	2a Solid (6)	43	9a Solid (4)	30	9a Solid (4)	43
2a Colour (5)	33	2a Colour (5)	46	9a Colours (4)	33	9a Colours (4)	46
2a Appli. (2)	34	2a Appli. (2)	47	10a Solid (3)	30	10a Solid (3)	43
3a Solid (8)	31	3a Solid (8)	44	10a Colours (7)	33	10a Colours (7)	46
3a Appli. (1)	34	3a Appli. (1)	47	11a Solid (9)	31	11a Solid (9)	44
3a Colours (3)	33	3a Colours (3)	46	11a Colours (9)	34	11a Colours (9)	47
7a Solid (7)	30	7a Solid (7)	43	12a Solid (10)	31	12a Solid (10)	44
7a Colours (6)	33	7a Colours (6)	46	12a Colours (2)	33	12a Solid (2)	46
8a Solid (2)	30	8a Solid (2)	43	18a Solid (1)	29	18a Solid (1)	42
				18a Colours (1)	32	18a Colours (1)	45
KNIT-IN (FAIRISLE)							
1a (5)	36	1a (5)	49	11a (16)	38	11a (15)	51
2a (9)	37	2a (9)	50	12a (18)	37	12a (8)	50
2a Appli. (2)	39	2a Appli. (2)	51	13a (13)	38	13a (13)	50
3a (15)	38	3a (14)	51	14a (12)	38	14a (12)	50
4a (2)	36	4a (2)	49	15a (3)	36	15a (3)	49
5a (18)	39	New card design	–	16a (7)	37	16a (7)	49
7a (17)	38	7a (16)	51	17a (6)	37	17a (6)	49
8a Appli. (1)	39	8a Appli. (1)	51	18a (11)	37	18a (11)	50
9a (4)	36	9a (4)	49	19a (14)	38	New card design	–
10a (10)	37	10a (10)	50	20a (1)	35	20a (1)	48
WEAVING							
1a (2)	42	1a (2)	56	4a (8)	43	4a (7)	57
1a Appli. (1)	45	1a Appli. (1)	59	4a Resting (1)	44	4a Resting (1)	58
2a (5)	42	2a (4)	57	5a (10)	43	New card design	–
2a Resting (3)	44	2a Resting (3)	58	7a (12)	43	7a (10)	58
2a Appli. (2)	45	2a Appli. (2)	59	8a (6)	42	8a (5)	57
3a (7)	42	3a (6)	57	9a (3)	42	9a (3)	56
3a (13)	43	3a (11)	58	14a (1)	40	14a (1)	55
3a Resting (2)	44	3a Resting (2)	58	16a (11)	43	16a (9)	57
3a Appli. (3)	45	3a Appli. (3)	59	18a (9)	43	18a (8)	57
3a Appli. (4)	45	3a Appli. (4)	59	19a (4)	42	New card design	–
PUNCH LACE							
1a (6)	48	1a (6)	62	14a (–)	–	14a (2)	62
2a (3)	48	2a (3)	62	15a (1)	46	15a (1)	60
5a (2)	48	New card design	–	17a (7)	48	17a (7)	60
7a (4)	48	7a (4)	62	20a (5)	48	20a (5)	
LACE KNITTING							
1a (1)	49	1a (1)	63	3a Appli. (1)	51	3a (3)	64
2a Appli. (2)	51	2a Appli. (2)	64	4a (2)	51	4a (2)	64
3a (3)	51	3a Appli. (1)	64				

Published with All Rights Reserved by

SINGER AUSTRALIA LIMITED

Memo-Matic* KNITTING FASHIONS BY SINGER

BOOK 37

*TRADE MARK OF THE SINGER COMPANY